

PREDICTING BRAIN CONNECTIVITY MAPPING USING RADIOMICS FEATURES IN ANATOMICAL MRI

LEVENTE ZSOLT NAGY

Thesis supervisor

ALFREDO VELLIDO ALCACENA (Department of Computer Science)

Thesis co-supervisor

ESTELA CAMARA MANCHA (Hospital Universitari de Bellvitge)

Degree

Master's Degree in Artificial Intelligence

Master's thesis

School of Engineering

Universitat Rovira i Virgili (URV)

Faculty of Mathematics

Universitat de Barcelona (UB)

Barcelona School of Informatics (FIB)

Universitat Politècnica de Catalunya (UPC) - BarcelonaTech

Abstract

This study explores alternatives to diffusion MRI for mapping brain connectivity, predicting fractional anisotropy and mean diffusivity, using radiomic features derived from T1 and T2 structural MRI images. This approach aims to significantly enhance the cost and time efficiency of data acquisition, eliminating the need for diffusion MRI and tractography. The research is centered on the basal ganglia, a region primarily affected by neurodegeneration in Huntington's disease, comparing its characteristics between control subjects and patients with the condition.

Contents

1	Introduction	7
1.1	Objectives	8
1.2	Motivation	9
1.3	State of the Art	9
2	Design	10
2.1	Preprocessing	10
2.1.1	Raw Data	10
2.1.2	Quality Control	13
2.1.3	Radiomics Features	14
2.1.4	Coordinates	15
2.1.5	Data Augmentation	15
2.1.6	Scaling and Normalization	15
2.1.7	Data Balancing	17
2.1.8	Clinical Data	18
2.1.9	Relative Connectivity	19
2.2	Evaluation	19
2.2.1	Train, Validation and Test Splits	19
2.2.2	Accuracy and Pearson Correlation	20
3	Experiments	21
3.1	Subcortical Segmentation	21
3.2	Methodology	22
3.2.1	Missing Records	23
3.2.2	Architecture Tuning	24
3.3	Diffusion Fractional Anisotropy Regression	24
3.4	Mean Diffusivity Regression	24
3.5	Relative Connectivity Segmentation	24
4	Sustainability	25
4.1	Environmental Aspect	25
4.1.1	Development	25
4.1.2	Production	26
4.2	Economic Aspect	26
4.2.1	Cost	26
4.2.2	Return	27

4.3	Social Aspect	28
4.3.1	Development and Collaborations	28
4.3.2	Inclusivity	28
5	Conclusions	29
5.1	Future Improvements	29
	Sources of Information	30
A	Large Figures	31
B	Large Tables	45
C	Source Code	62

List of Notations & Abbreviations

MRI magnetic resonance imaging	7
dMRI diffusion magnetic resonance imaging.....	7
FA fractional anisotropy	7
MD mean diffusivity	7
RD radial diffusivity	7
ROI region of interest	7
NN neural network	14
FNN feedforward neural network.....	21
CNN convolutional neural network.....	14
FCNN fully convolutional neural network.....	13
NIfTI neuroimaging informatics technology initiative.....	10
FMRIB functional magnetic resonance imaging of the brain	
FNIRT FMRIB's nonlinear image registration tool.....	7
GLCM gray level co-occurrence matrix	15
GLSZM gray level size zone matrix.....	15
GLRLM gray level run length matrix.....	15
NGTDM neighbouring gray tone difference matrix	15
GLDM gray level dependence matrix	15
cUHDRS composite Unified Huntington's Disease Rating Scale	18
CAP CAG Age Product	18

List of Figures

1.1	Basal Ganglia (ROI) & Cortical Targets	7
1.2	Connectivity Maps	8
2.1	Simple Model Overview	10
2.2	Basal Ganglia Subcortical Segmentation	12
2.3	Histogram: Firstorder Energy	16
2.4	Histogram: GLDM Small Dependence High Gray Level Emphasis	16
2.5	Histogram: NGTDM Busyness	17
2.6	Balance: Subcortical	17
2.7	Balance: Diffusion MD	18
2.8	Balance: Diffusion FA	18
2.9	Balance: Relative Connectivity (thresholded at 0.6 & binarized)	18
2.10	Distribution of Records in relation to Datapoints	19
A.1	Slice: GLDM Small Dependence High Gray Level Emphasis	31
A.2	Slice: NGTDM Busyness	32
A.3	Training Curve: Subcortical	33
A.4	Train Predictions: Subcortical	33
A.5	Validation Predictions: Subcortical	34
A.6	Test Predictions: Subcortical	35
A.7	Training Curve: Mean Diffusivity	35
A.8	Train Predictions: Mean Diffusivity	36
A.9	Validation Predictions: Mean Diffusivity	37
A.10	Test Predictions: Mean Diffusivity	38
A.11	Training Curve: Diffusion Fractional Anisotropy	38
A.12	Train Predictions: Diffusion Fractional Anisotropy	39
A.13	Validation Predictions: Diffusion Fractional Anisotropy	40
A.14	Test Predictions: Diffusion Fractional Anisotropy	41
A.15	Training Curve: Relative Connectivity	41
A.16	Train Predictions: Relative Connectivity	42
A.17	Validation Predictions: Relative Connectivity	43
A.18	Test Predictions: Relative Connectivity	44

List of Tables

1.1	Regions Legend	8
2.1	Raw Data	11
2.2	Uniform Data	13
2.3	Radiomic Feature Types	15
3.1	Hyperparameters: Common	21
3.2	Hyperparameters: Subcortical	21
3.3	Hyperparameter Tuning: Subcortical	22
3.4	Missing Records	23
4.1	Sustainability	26
4.2	Billing	27
B.1	Voxel Based Radiomic Features	46
B.2	Shape Based Radiomic Features	46
B.3	Hyperparameter Tuning: Diffusion Fractional Anisotropy - Native T1	47
B.4	Hyperparameter Tuning: Diffusion Fractional Anisotropy - Native T1/T2	48
B.5	Hyperparameter Tuning: Diffusion Fractional Anisotropy - Normalized T1	49
B.6	Hyperparameter Tuning: Diffusion Fractional Anisotropy - Normalized T1/T2	50
B.7	Architecture Tuning: Diffusion Fractional Anisotropy	51
B.8	Hyperparameter Tuning: Mean Diffusivity - Native T1	52
B.9	Hyperparameter Tuning: Mean Diffusivity - Native T1/T2	53
B.10	Hyperparameter Tuning: Mean Diffusivity - Normalized T1	54
B.11	Hyperparameter Tuning: Mean Diffusivity - Normalized T1/T2	55
B.12	Architecture Tuning: Mean Diffusivity	56
B.13	Hyperparameter Tuning: Relative Connectivity - Native T1	57
B.14	Hyperparameter Tuning: Relative Connectivity - Native T1/T2	58
B.15	Hyperparameter Tuning: Relative Connectivity - Normalized T1	59
B.16	Hyperparameter Tuning: Relative Connectivity - Normalized T1/T2	60
B.17	Architecture Tuning: Relative Connectivity	61

Introduction

Basal ganglia is a part of the human brain which is a group of subcortical nuclei responsible primarily for motor control, as well as other roles such as motor learning, executive functions and behaviors, and emotions. [1] Huntington’s disease is a disorder that causes the progressive degeneration of the basal nuclei. [2]

Hospital de Bellvitge provided an excellent dataset of magnetic resonance imaging (MRI) and diffusion magnetic resonance imaging (dMRI) records of 32 control and 38 Huntington patient records of T1 and T1/T2 MRI images with isotropic voxels of 1 millimeter resolution and dMRI fractional anisotropy (FA), mean diffusivity (MD) and radial diffusivity (RD) images with isotropic voxels of 2 millimeter resolution. Furthermore this dataset also contains the mask for the basal ganglia, which will also be referenced as the region of interest (ROI). Masks for the 7 main cortical regions of the brain, which will also be referenced as the target regions: Limbic, Executive, Rostral-Motor, Caudal-Motor, Parietal, Occipital and Temporal are also included in the dataset. Tractography was performed on the dMRI images to figure out which parts of the ROI are connected to which cortical target, in a similar manner to how it was done in this paper [3]; where the relative connectivity maps are representing the ratio of the number of streamlines to each cortical target. Furthermore, the raw streamline images are also available, where there are a maximum of 5000 streamlines from each voxel in the ROI. The subcortical segmentation of the Basal Ganglia is also available, for the Caudate, Putamen and Accumbens on the control records. And lastly FMRIB’s nonlinear image registration tool (FNIRT) warp fields were also provided for converting the records into normalized space.

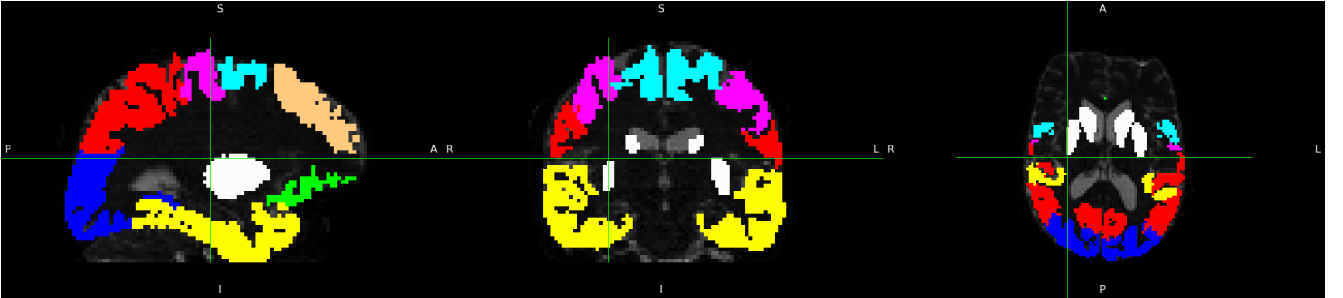


Figure 1.1: Basal Ganglia (ROI) & Cortical Targets

Color	Region
□ White	Basal Ganglia (ROI)
■ Green	Limbic
■ Brown	Executive
■ Light Blue	Rostral-Motor
■ Purple	Caudal-Motor
■ Red	Parietal
■ Blue	Occipital
■ Yellow	Temporal

Table 1.1: Regions Legend

Furthermore, for both the ROI and cortical targets, the dataset distinguishes between the right and left hemispheres of the brain. Thus there are actually 2 ROIs and $2 \cdot 7 = 14$ target regions.

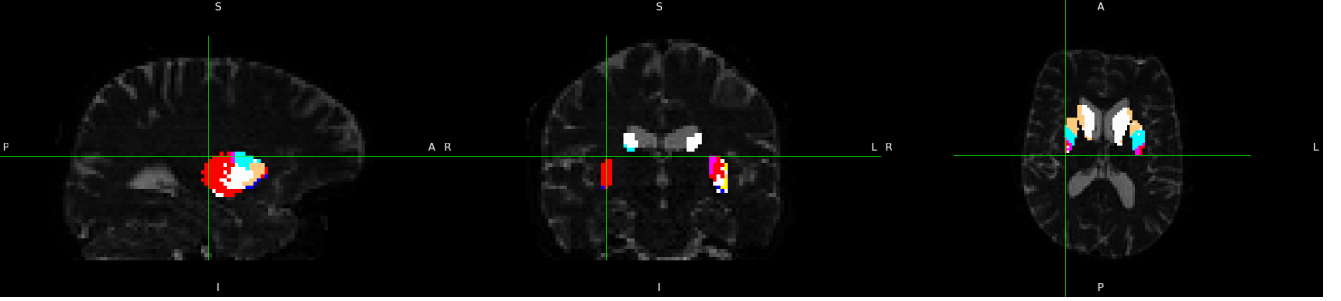


Figure 1.2: Connectivity Maps

1.1 Objectives

The end goal is to predict the relative connectivity of the Basal Ganglia to the cortical targets, from the radiomics features of the T1 and T1/T2 images.

This being a very complex problem, there is the possibility that the correlation between the connectivity of the brain and the T1, T1/T2 images are too weak to be mapped on this dataset. As from a datascience perspective, 70 records are not much. But from a medical perspective it is substantial as it is very hard to collect uniform, clean data, with permissions to use it for research.

A simpler task leading up to the complex end goal, is a model for the simple segmentation of the Basal Ganglia for the subcortical regions Caudate, Putamen and Accumbens. In order to confirm that the radiomics texture of the T1 and T1/T2 images of this dataset are correlated to the segmentation of the Basal Ganglia. This problem is inherently connected to the main goal, as the relative connectivity does obey certain anatomical restrictions, and the subcortical segmentation of the Basal Ganglia is confirmed to be related to the relative connectivity. Thus if this simpler prediction fails, there is a good chance that the complex end goal will fail as well.

Another intermediate task, is a model for predicting FA and MD images. This is also related to the main goal, as these images are computed from the dMRI images, the same image that the relative connectivity is computed from. But it is inherently simpler, not needing to perform complex algorithms like tractography.

The biggest obstacle of this project is the preprocessing of the data, as there are many variations and hyperparameters that can be tuned. An exhaustive search definitely will not be viable, thus

the preprocessing and model will needed to be tuned in a waterfall like manner, making educated guesses and comparing model performances across different tries. The main metric to measure model performance, will be the accuracy of the label prediction across voxels, as it should be comparable between all approaches. And pearson correlation will be used as the metric to evaluate the FA and MD regression predictions.

1.2 Motivation

The motivation for predicting the connectivity maps from the T1 and T1/T2 MRI images, is skipping the time and resource consuming process performing dMRI and tractography.

1.3 State of the Art

Design

In order to understand some of the following design choices, it makes sense to establish it early that the model will be operating on extracted voxel based features and non-voxel based features, and will predict on a voxel by voxel level.

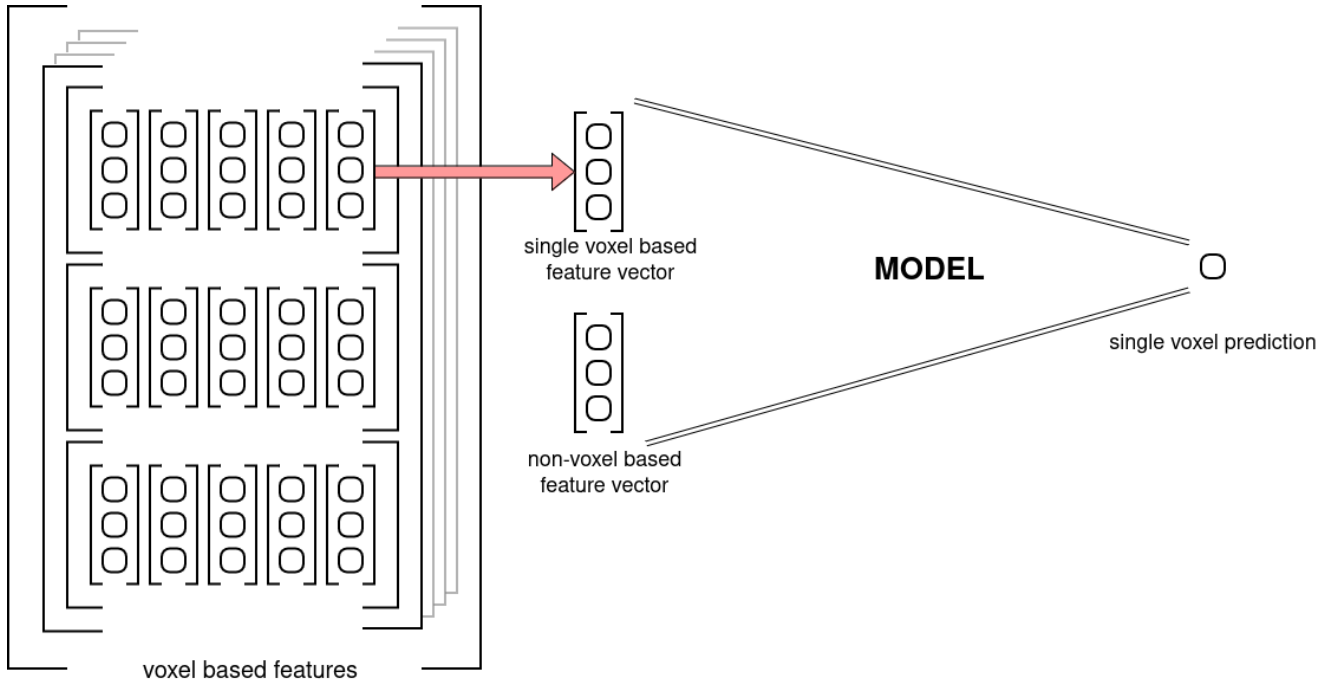


Figure 2.1: Simple Model Overview

This report will reference to the control/patient spatial data as **'Record'** (*"voxel based features" in Figure 2.1*) and will reference to the individual feature vectors as **'Datapoint'** (*"single voxel based feature vector" and "non-voxel based feature vector" in Figure 2.1*). This logical differentiation is needed, as the model only operates on Datapoints and has no global context available, while some preprocessing and evaluation logic should happen on a Record level.

2.1 Preprocessing

2.1.1 Raw Data

All provided records are in the neuroimaging informatics technology initiative (NIfTI) format, first these are need to be understood and parsed. This format stores the raw output of the MRI record, and additionally an affine transformation matrix used for aligning different spaces.

2.1.1.a Available Data

The following records will be preprocessed and read, even if not all of them are going to be used later on it helps providing the largest possible flexibility.

Data	Shape	Range	Type	Space	Reference
dMRI	(118, 118, 60, 74)	[0, 4096]	uint	diffusion	diffusion
Diffusion FA	(118, 118, 60)	[0, 2]	float	diffusion	diffusion_fa
Diffusion MD	(118, 118, 60)	[0, 0.01]	float	diffusion	diffusion_md
Diffusion RD	(118, 118, 60)	[0, 0.01]	float	diffusion	diffusion_rd
T1	(208, 256, 256)	[0, 1000]	float	t1	t1
T1/T2	(208, 256, 256)	[0, 1]	float	d_aligned	t1t2
Cortical Targets	(118, 118, 60, 14)	{0, 1}	bool	diffusion	targets
Relative Connectivity	(118, 118, 60, 14)	[0, 1]	float	diffusion	connectivity
Streamline Image	(118, 118, 60, 14)	[0, 5000]	uint	diffusion	streamline
ROI Mask (Basal Ganglia)	(118, 118, 60, 2)	{0, 1}	bool	diffusion	mask_basal & roi
Brain Mask	(208, 256, 256)	{0, 1}	bool	t1	mask_brain
Basal Ganglia Segmentation	(208, 256, 256)	[0, 58]	uint	t1	basal_seg

Table 2.1: Raw Data

2.1.1.b Brain Mask

The provided dataset did not apply the brain masks for the T1 images out of the box so it can be done with a simple element wise multiplication of the T1 image and T1 mask.

2.1.1.c Registration

The process of aligning different records into the same native space is called "registration". The provided dataset comes with with 2 (3) different spaces, earlier referenced to as t1 and diffusion (and d_aligned). Most of the data are in diffusion space, thus it is logical to register the rest into the same space. After manual inspection, only 15 records required registration. Out of which 3 only required a tiny translation, and the rest 12 needed a complete affine registration.

The image T1/T2 is the odd one out, as it is inherently in a different space from diffusion (due to them being different resolution). But they are aligned into diffusion space. Although they do not need to be registered, this has to be taken into account later on.

2.1.1.d Normalization

The process of warping each brain into a common space is called "normalization". Applying the FNIRT warp fields are more or less straight forward, as two warp fields are provided, one for the diffusion space and one for the T1 space. Note that this process inherently contains the benefits of registration, as it is warping the different images into a common brain shape and space. This also paves the direction of future experiments, as it opens the door to working in either native and normalized space.

The only encountered obstacle was with the T1/T2 image. As it is aligned in diffusion space, but FNIRT convention ignores the affine transformation of the NIfTI format, thus making it's registration useless as the raw data of the t1t2 has nothing to do with the raw diffusion data

(due to them being different resolution). The solution is to apply an affine matrix to t1t2's raw data which transforms it into t1's raw data space, after which the t1's FNIRT warp field can be applied to the t1t2 image. This affine transformation matrix can be easily calculated from the already given matrices. Let A denote T1/T2's affine matrix and B denote T1's affine matrix (after registration), thus the matrix which transforms the T1/T2 into T1 space is $M = A \cdot B^{-1}$.

2.1.1.e Basal Ganglia Segmentation

As the tractography of the brain is performed on the diffusion image, it inherently means that the connectivity maps and the roi are in diffusion space. But the basal ganglia's subcortical segmentation is in T1 space. This means that even if they are registered in the same space, they will not have a pixel perfect union due to the different resolutions.

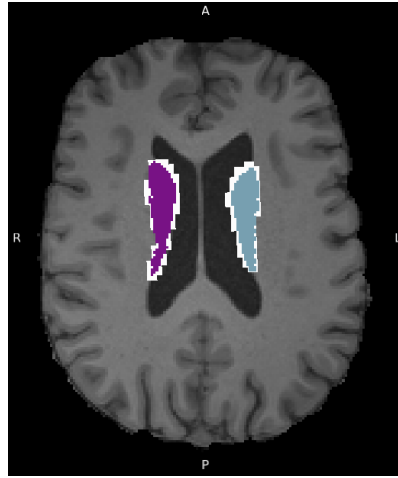


Figure 2.2: Basal Ganglia Subcortical Segmentation

The figure above visualizes the alignment of the Caudate subcortical region, where the white (larger) region is the Basal Ganglia mask from the diffusion space and the colored (smaller) regions are the Basal Ganglia segmentation from T1 space.

In order to keep the data consistent, mapping the segmentation to the Basal Ganglia mask can be done by assigning the same label for each voxel in the basal ganglia as the label of the closest voxel in the subcortical segmentation.

2.1.1.f N-Dim Array

The used NIfTI format stores the raw voxel space and the affine transformation matrix separately, in order to not lose data in the process of interpolating voxels when applying the transformation. But in order to consistently compare voxel data across different spaces (even if they are registered in the same space), the transformation needs to be applied, computing the interpolated voxels in the common space, bringing them into the same raw format of matching X, Y and Z dimensions, and discarding the stored affine matrices.

By default the native anatomical space's origin is near the center of mass of the brain, between the ears. This makes sense for medical professionals, when working with MRI records, but data-structure wise an array is indexed from 0. Meaning after applying the transformation to the voxel space, the yielded array will only contain one quadrant of the record as the rest are clipped in the

negative regions. Thus the space is also needed to be translated with the negative vector of the transformed space's bounding box's lower end.

The translation value can be calculated by calculating the boundaries of the transformed space's bounding box. Get all 8 corners of the voxel space and apply the transformation matrix to all of them. Then get the min-max coordinates along X, Y and Z from the 8 transformed vectors, yielding the lower and upper bounds of the transformed space's bounding box.

It is very important to use the same translation value across different spaces to properly align them in the native space. For example let D and T denote a diffusion and t1 records and M_D and M_T denote their respective transformation matrices. Let T_D and T_T denote their respective translation values. In order to properly align them we need to apply $A_D = (M_D \cdot T_D)$ matrix and $A_T = (M_T \cdot T_D)$ matrix to D and T respectively, with matching T_D translation values.

The last issue is the misaligned length of the dimensions of the T1 and diffusion records. This can be simply fixed by truncating the excess along each dimension.

2.1.1.g Uniform Shape

After aligning the data into the same space per record, it is still very likely that the individual records do not have a uniform shape. This is due to them being in native space, some records will contain a smaller volume brain, some will contain a larger, they will not be the same.

Due to the per-voxel based prediction model architecture this is not a problem, but fixing this for being able to use the data in a spatial model like a fully convolutional neural network (FCNN) can be simply solved by adding padding to the records in order to match their shapes.

Data	Volumes	Range	Type
diffusion	74	[0, 4096]	float16
diffusion_fa	1	[0, 2]	float16
diffusion_md	1	[0, 0.01]	float16
diffusion_rd	1	[0, 0.01]	float16
t1	1	[0, 1000]	float16
t1t1	1	[0, 1]	float16
targets	14	{0, 1}	bool
connectivity	14	[0, 1]	float16
streamline	14	[0, 5000]	float16
mask_basal	2	{0, 1}	bool
mask_brain	1	{0, 1}	bool
basal_seg	6	{0, 1}	bool

Table 2.2: Uniform Data

2.1.2 Quality Control

Having a low count of records means that if there are even just a few outliers, it can heavily affect the end result. Thus all data were manually inspected to make sure they are as clean as possible.

2.1.2.a Mismatched Data

Looking through the diffusion, diffusion_fa, diffusion_md and diffusion_rd images, 2 records' FA, MD and RD images were seemingly from completely different patients. Thus the FA, MD and RD images were omitted for 2 records.

2.1.2.b Garbled Data

Looking through the subcortical segmentation of the Basal Ganglia revealed that 1 record had a garbled segmentation. Thus, said basal_seg image was omitted for 1 record.

And one record had a garbled T1 FNIRT warp field. Said record was entirely omitted from the normalized set of records.

2.1.2.c Missing Data

Looking through the relative connectivity and streamline images, 3 records were missing these images, said 3 records were completely omitted, as these records are effectively missing the labels.

And the t1t2 images were missing for 10 records, but these were not omitted completely as the t1 images were present for these records, thus experiments only concerning the t1 can have a bit more available data.

2.1.3 Radiomics Features

Although the term is not strictly defined, radiomics generally aims to extract quantitative, and ideally reproducible, information from diagnostic images, including complex patterns that are difficult to recognize or quantify by the human eye. [4] Using these features is key, as there are not nearly enough data for neural network (NN) based features extraction such as a convolutional neural network (CNN).

Extracting the voxel based radiomic features has two main parameters to tune, the bin width and the kernel width. Where the binning parameter(s) influence how the intensity values of the image are binned, and the kernel size influences the size of the 'sliding window' similar to a convolution.

The two approaches for binning are absolute discretization and relative discretization. Where in the prior one, a fixed bin width is chosen and in the latter one, a fixed number of bins are chosen and the bin width scales relatively according to the min-max voxel values. This study found that "The absolute discretization consistently provided statistically significantly more reproducible features than the relative discretization." [5] Relying on this information, the obvious choice to start with is the absolute discretization.

The bin width and the kernel width will be tuned in later experiments. And possibly features calculated with different setting will be concatenated and used simultaneously for better results. The used default values will be 25 and 5 for the bin and kernel widths respectively.

The following types of radiomic features will be used:

Feature Type	Number of Features
first order	18
gray level co-occurrence matrix (GLCM)	23
gray level size zone matrix (GLSZM)	16
gray level run length matrix (GLRLM)	16
neighbouring gray tone difference matrix (NGTDM)	5
gray level dependence matrix (GLDM)	14
3D shape	17

Table 2.3: Radiomic Feature Types

2.1.3.a Voxel Based

The 92 features in Table B.1 will be calculated voxel based. Shape features do not makes sense to calculate voxel based as it would just describe the shape of the used kernel, which is constant and independent from the input image.

2.1.3.b Non-Voxel Based

However, the additional shape features in Table B.2 do make sense for the non-voxel based features. As it can be computed for each target region, both hemispheres of the ROI and the entire brain.

2.1.4 Coordinates

One additional input that can be included in the experiments is the coordinates. Although this approach only makes sense in normalized space, where the images from different records are aligned. This theoretically would allow the model to learn certain anatomical markers based on the location of the voxel, adding a type of global context to the input of the model.

Furthermore, this approach can be adopted to the native space, by constructing the normalized coordinate map and then 'de-normalizing' them with an inverse FNIRT warp field.

2.1.5 Data Augmentation

The only data augmentation that makes sense involves applying small rotation values to the input images in their native space before calculating radiomic features. Applying transformations to the already extracted features is illogical, as interpolating between voxels in feature space is unlikely to yield the same results as computing features after transforming the input images. In summary, any spatial data transformations should be performed upstream. Furthermore, data augmentation only makes sense in native space, as by definition such transformations would make the normalized image pointless.

2.1.6 Scaling and Normalization

As the extracted features have very different ranges, it makes sense to follow the standard practice of scaling the data to a fixed range. Inspecting the histogram of some of the radiomic features reveals that most of them follow a bell curve with moderate standard deviation, such as Figure 2.3 (Firstorder Energy).

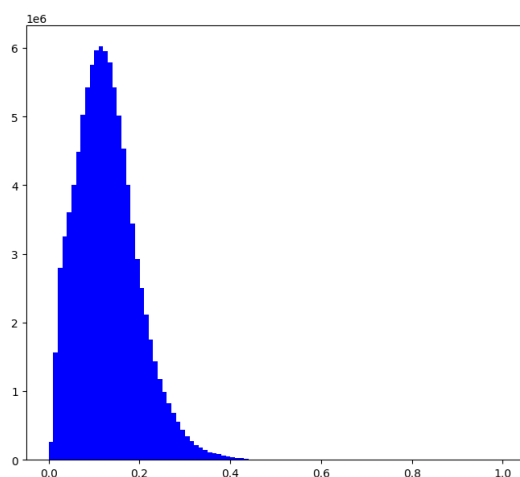


Figure 2.3: Histogram: Firstorder Energy

However, some other features like Figure 2.4 (GLDM Small Dependence High Gray Level Emphasis) and Figure 2.5 (NGTDM Busyness) have a very skewed distribution, the latter one being the most extreme case. This skewing can be eliminated by applying logarithm to the offending features.

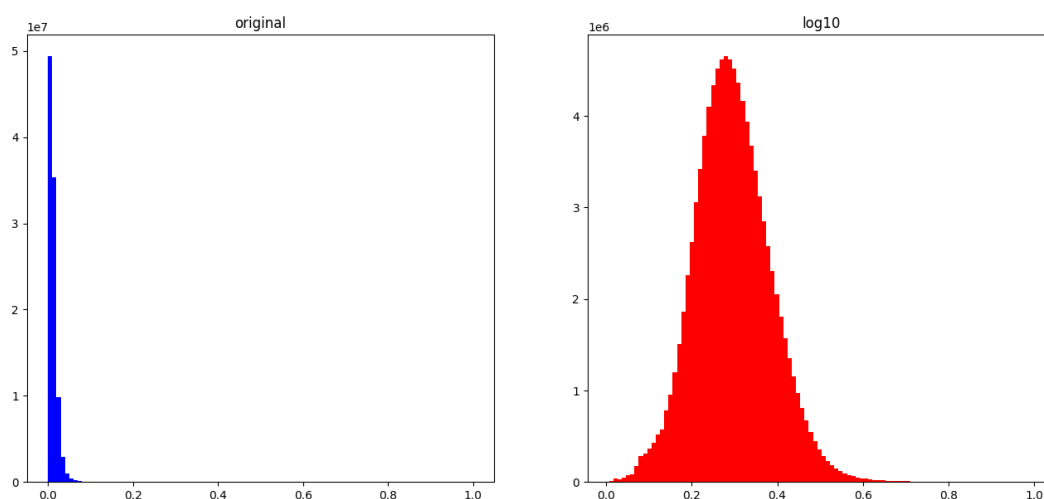


Figure 2.4: Histogram: GLDM Small Dependence High Gray Level Emphasis

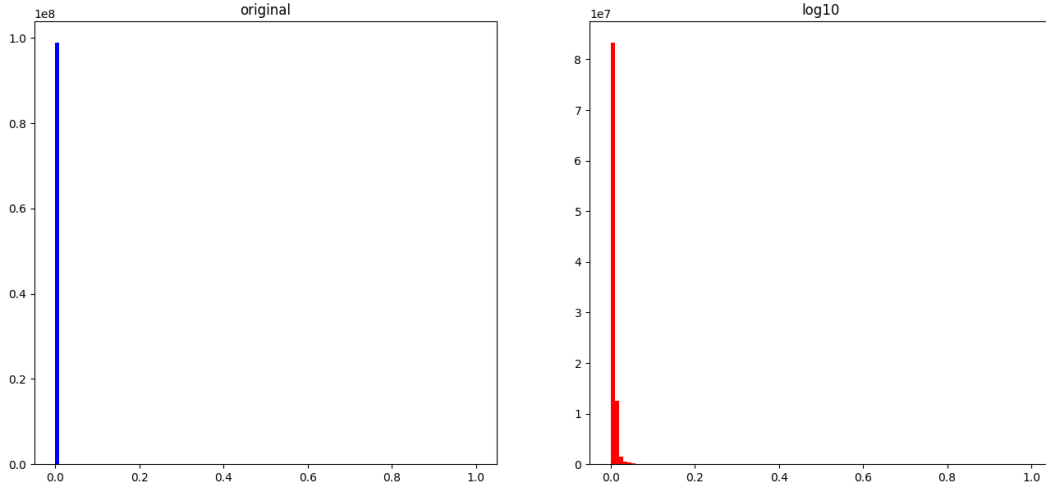


Figure 2.5: Histogram: NGTDM Busyness

Besides the standard benefits of making the optimization process more stable and efficient, and reducing the sensitivity to outliers. It also have some less evident benefits.

Although it is very subtle, but storing these records in float16 inherently loses some information. This loss is not a problem for the features that have a healthy distribution, but in the more extreme cases it can cause compression artifacts visible even to the naked eye, such as the very subtle loss of detail in Figure A.1. And in the most extreme case it can even render the entire feature useless like in Figure A.2. While the normalized features have no problem storing this fine detail in float16.

This makes the system much more robust from a practical perspective; as depending on the hardware, some GPUs are much more efficient at computing in float16. And it also halves the memory and storage requirements, as in float32 a single MRI image of 92 volumes (for the 92 features) takes up around 1GB of space.

2.1.7 Data Balancing

Working with highly unbalanced data can be challenging, and balancing it does not necessarily going to help the model's generalization capability. Thus, a method for partially balancing the data will be used, where the bins of the unbalanced data will be up-sampled by a ratio of the difference of the number of datapoints in the bin (compared to the bin with the maximum number of datapoints). Figure 2.6 demonstrates how a ratio 1 means perfectly balanced data, 0 means unbalanced data. And how the ratios in between are approximately preserving the shape of the distribution and partially balance the data.

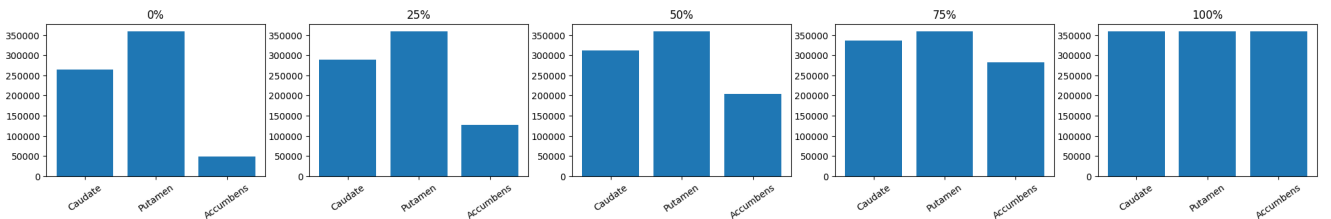


Figure 2.6: Balance: Subcortical

For the `diffusion_md` and `diffusion_fa`, which are regression problems and have continuous labels, binning can be used to create artificial groups which can be balanced.

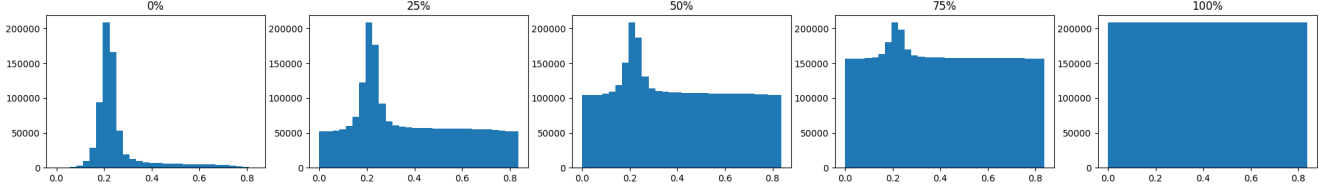


Figure 2.7: Balance: Diffusion MD

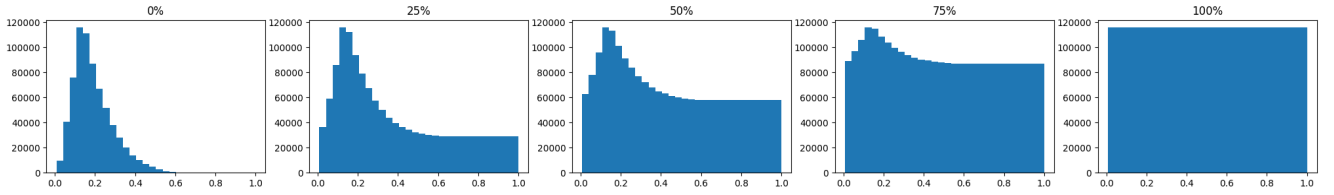


Figure 2.8: Balance: Diffusion FA

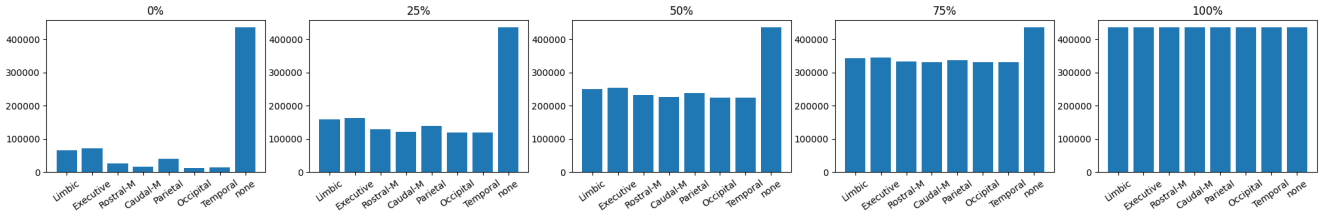


Figure 2.9: Balance: Relative Connectivity (thresholded at 0.6 & binarized)

2.1.8 Clinical Data

There are additional clinical data available for the Patient records. Disease severity can be characterized in terms of CAG Age Product (CAP) score. Providing a measure of cumulative exposure to the mutant HTT gene. [6] This widely accepted and used CAP score is available for all patients.

Another, newer metric for characterizing disease severity is the composite Unified Huntington's Disease Rating Scale (cUHDRS) [7]. This is calculated from 4 other basic metrics: Total Functional Capacity, Total Motor Score, Symbol Digit Modalities Test and Stroop Word Reading. These are available for most patients, with a handful exceptions.

And there are a total of 91 available clinical features, with relatively a lot of missing data on some of these features. There are 8 additional patients available in the clinical data. These can be used to aid the data imputation for the missing values, and can be omitted afterwards, as these have no corresponding MRI records.

All clinical features were scaled the range of 0-1 with min-max scaling (per feature). And euclidean distance was used for the following imputation process. The imputation strategy itself consisted of 2 steps, first the few missing cUHDRS values were imputed from the CAP score. And then the remaining features were imputed from the combined CAP and cUHDRS values.

2.1.9 Relative Connectivity

asdf

2.2 Evaluation

2.2.1 Train, Validation and Test Splits

There are 2 important aspects when splitting the data into Train/Validation/Test groups. In order to truly validate the model's generalization capability, the split must happen on a record level and not on a datapoint level. This means that our model can only learn on certain records, and it can be validated on records that it never seen before, not even partially. This has the consequence of that the split will not follow the defined ratio on a datapoint level, as it could happen that by pure chance the train split contains records with larger volumes, resulting in having a bit more datapoints than the validation split.

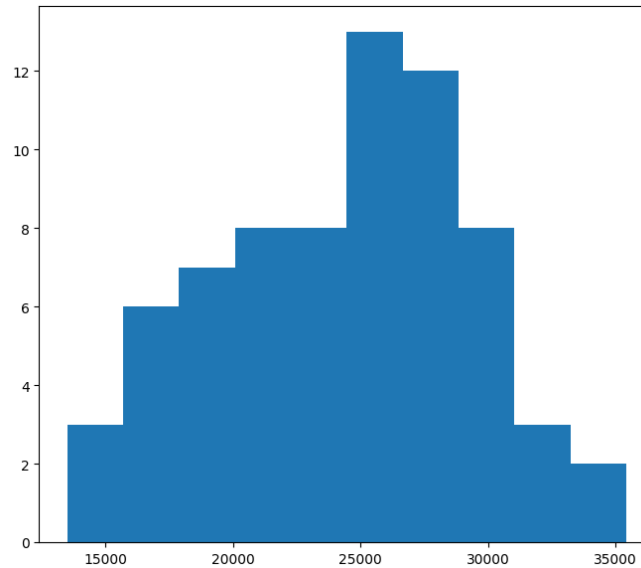


Figure 2.10: Distribution of Records in relation to Datapoints

In practice the lower end of datapoint count per record is around half of the higher end. Figure 2.10 shows the distribution of both Control and Patient records and both Left and Right datapoints. During experimentation, with 0.8 Train split and 0.5 Validation/Test split, the datapoint ratios stayed in the range of 0.8 ± 0.02 and 0.5 ± 0.06 for the two split ratios.

Furthermore to avoid introducing bias in the case of experiments with mixed Control and Patient records, the ratio of Controls/Patients must be constant across the different splits. This is required as Controls and Patients can have vast differences due to neurodegeneration. An extra caveat is having another ratio that must also be kept constant for the same reason, which is the symptomatic and asymptomatic patients, as they can also have vast differences due to different stages of neurodegeneration.

2.2.2 Accuracy and Pearson Correlation

There will be 3 groups of metrics for evaluating each model. First is the 'raw' (will also be referenced as 'train') metric group (train/val/test), which is computed on the datapoints that were extracted with the same hyperparameters as the datapoints during the training process. Meaning that this metric group best reflects how the model performs on the different splits, such as if the model was trained with a balancing of 0.5, all splits will be balanced the same way and the metrics will be computed on a datapoint level (the same way as how it is naturally computed in the loss function).

The second and third groups are for comparing model performances in between models and are for practical evaluation. The difference is that the metrics in this case are computed for each record, and then averaged out inbetween records. This means that it is computed on a record level instead of a datapoint level, resulting in the elimination of potential bias coming from the deviation from the number of datapoints per records. It also means that these metric groups will inherently ignore data balancing, as it operates on a record level.

And the 2nd metric group is computed in native space, while the 3rd is computed in normalized space. This means that if the model operates in native space, the normalized metrics will be computed by predicting the datapoints for each record, then the spaital record is reconstucted from the datapoints and warped to normalized space, and then the datapoints are extracted from the normalized spaital prediction, and compared against the normalized labels (This process would be computationally quite expensive, so the implementation does not follows this exact logic, but numerically it is doing the same; more information on this in Appendix ??). This way the models can have comparable metrics even if they operate in different spaces.

Experiments

The following hyperparameters were constant during all of the experiments:

Hyperparameter	Value
Train Split	0.8
Validation/Test Split	0.5
Model Type	feedforward neural network (FNN)
Optimizer	Adam

Table 3.1: Hyperparameters: Common

3.1 Subcortical Segmentation

This simple problem did not need a lot of tuning, as it was working very well almost from the start. The following set of hyperparameters were constant during these experiments:

Hyperparameter	Value
Control/Huntington Datapoints	Control Only
Left/Right Hemisphere Datapoints	Both
Space	Native
Image	T1
Scaling/Normalization	Normalized Voxel Based Features
Hidden Layers	1024 \rightarrow 512 \rightarrow 256 \rightarrow 128
Loss	Categorical Crossentropy
Activation	Sigmoid (softmax for the output layer)
Learning Rate	0.001
Batch Size	10000
Early Stopping Patience	7

Table 3.2: Hyperparameters: Subcortical

The reasoning behind the initial choices of these parameters are straight forward. The T1 image and native space were chosen, because those are the simplest to acquire in practice. Thus if the model is doing great on those, there is no need for more complicated inputs. Including both hemispheres would hopefully result in a model which can generalize better. Only using control datapoints should translate into less variance between the general characteristics of the datapoints, as it does not contain patients with neurodegeneration. The number and sizes of the hidden layers were chosen based on the potential size of the input layer, which should range from 92 (single set of voxel based features) up to $\sim 1000 - 2000$ including many different kernel sizes and non-voxel based features as well. Categorical crossentropy loss function and the output layer's softmax activation function are standard practice for a classification problem. The Sigmoid activation function should work fine without having to deal with exploding gradients and dying

relu problems. Learning rate is the default learning rate of the Adam optimizer in TensorFlow. And a batch size of 10,000 seems appropriate for a train split size of 1,000,000 datapoints. And the early stopping patience of 7 epochs should also be good enough to prevent overfitting and stop the training in time, but it will be evaluated based on the learning curves and the accuracy of the model.

The used metric for evaluating model performance on the Train/Validation/Test splits is Accuracy. The 'k' and 'b' notations stand for kernel and bin, where k5 means a kernel width of 5mm, b25 means an absolute bin size of 25, and b10r means relative binning with 10 bins. And in the case of multiple kernel sizes denoted by a dash, it naturally only means odd kernel sizes. Tuning the rest of the hyperparameters were done in the following experiments:

	Experiment	Train	Val	Test	Input Layer
1.	Voxel Features k5_b25	68.9	69.1	72.4	92
2.	<i>Voxel Features k5_b25</i> Non-Voxel Features of Target Regions b25	73.2	68.9	72.5	1576
3.	<i>Voxel Features k5_b25</i> Non-Voxel Features of ROI b25	75	74.3	78.5	304
4.	<i>Voxel Features k5_b25</i> <i>Non-Voxel Features of ROI b25</i> Non-Voxel Features of Brain b25	74.5	70.4	70.3	410
5.	<i>Voxel Features k5_b25</i> Non-Voxel Features of ROI b10 b25 b50 b75	71.2	70.6	74.3	856
6.	Voxel Features k5_b25 - k21_b25 <i>Non-Voxel Features of ROI b25</i>	94.5	94.1	95.1	1040
7.	Voxel Features k5_b25 - k21_b25	95	94.6	93.7	828
8.	<i>Voxel Features k5_b25 - k21_b25</i> <i>Non-Voxel Features of ROI b25</i> Balance Ratio 0.5	94.9	94.4	94.9	1040
9.	<i>Voxel Features k5_b25 - k21_b25</i> <i>Non-Voxel Features of ROI b25</i> Balance Ratio 1	95.9	95.5	95.9	1040

Table 3.3: Hyperparameter Tuning: Subcortical

The best performing model was in experiment number 9, where it achieved a 96% accuracy with practically no overfitting. The biggest improvement during the experiments was to include many different kernel sizes for the voxel based features. The additional non-voxel based features of the ROI yielded a small improvement. And balancing the data yielded a marginal improvement, by reducing overfitting.

Examples of the true/predicted records can be found in Figures A.4 A.5 A.6. And the loss training curves can be found in Figure A.3.

3.2 Methodology

The experimentation from this point on, will be divided into 4 main groups:

- Native - T1

- Native - T1/T2
- Normalized - T1
- Normalized - T1/T2

The same set of core experiments will be run for all 4 groups, and some additional experiments will be run per group, depending on how they perform. The experiments will consider the following aspects:

- Single/Many Different Kernel Sizes for Voxel Based Features
- Additional Non-Voxel Based Features
 - Single/Many Different Bin Sizes
- Control/Patient/Both Records
- Left/Right/Both Hemisphere Datapoints
- Additional Clinical Features for Patient Records
- Additional Coordinate Map Features
- Scaled Voxel Based Features (not normalized)
- Different Bin Sizes for Voxel Based Features
- Different Balance Ratios

3.2.1 Missing Records

In order to be completely fair when comparing model performances, only records should be used which are available for all 4 groups of experiments. In practice the following records were missing:

Record	Missing Amount
Normalized	1
T1/T2	10
Diffusion FA & MD	2

Table 3.4: Missing Records

This meant that for the Diffusion FA & MD experiments there were a total of 13 records omitted, yielding 57 records in total, out of which 29 are Control and 28 are Patient records. And for the Relative Connectivity experiment, 11 records were omitted, yielding 59 records in total, out of which 30 are Control and 29 are Patient records.

As additional experiments for the groups with more available data (such as T1, where 10 more records could be included), these records can be appended to the train split on the best performing model, feasibly increasing model performance.

3.2.2 Architecture Tuning

For the best performing model, the architecture will be further tuned, considering the following aspects:

- Number of Layers and Layer Sizes
- Activation Function
- Batch Size
- Learning Rate
- Dropout Normalization
- Early Stopping Patience

3.3 Diffusion Fractional Anisotropy Regression

3.4 Mean Diffusivity Regression

3.5 Relative Connectivity Segmentation

Sustainability

4.1 Environmental Aspect

4.1.1 Developement

The biggest environmental impact of this project was the required computational power to train the models. During the entire duration of the project there were approximately a total of 5000 models were trained.

Out of which the most demanding part was the exhaustive sequential backward feature selection, which in itself required the training of 3000 models. The return value of this computation is close to none, as it did not increase the model performance. The only marginal benefit is the model being able to reach the same performance on 2/3rd of the original feature count. This is marginal because the omitted features belong to different feature groups, and the biggest overhead for most feature groups is calculating the voxel-based matrix volume; meaning if not all features are omitted from a feature group, it only decreases the computational requirements marginally. In conclusion, this was not worth computing.

The 3000 models trained for the features selection were trained on a wide variety of GPUs in a network cluster. These GPUs were H100, P40, RTX3060, RTX3090, RTX2080, multiple T4s (Google Collab's), multiple P100s (Kaggle's). Mining the cluster head's log, reveals that around half of these models were trained on the H100 and the other half on the rest. The H100 was consuming around 300 Watts of power while training with a speed of 5s/epoch and taking 30-60 epochs on average to stop. The H100 consumed between $1500 \cdot 0.3\text{kW} \cdot 30 \cdot 5\text{s} \div 60 \div 60 = 18.75\text{kWh}$ on the lower and $2 \cdot 18.75 = 37.5\text{kWh}$ on the upper end. The other half is harder to estimate due to the many different GPUs used in the cluster, but a crude estimate is $1500 \cdot 0.2\text{kW} \cdot 30 \cdot 8\text{s} \div 60 \div 60 = 20\text{kWh}$ on the lower and $2 \cdot 20 = 40\text{kWh}$ on the upper end. Rounding the sum of them up to 80kWh and adding an extra 30% overhead for running the rest of the components of the servers/PCs, results in an upper boundary of 104kWh consumed during the feature selection.

The rest of the 2000 models were trained on the P40 and RTX3060, with preferring the P40 and probably training 3/4th of them. Doing the same estimations for the P40 yields $1500 \cdot 0.2\text{kW} \cdot 30 \cdot 7\text{s} \div 60 \div 60 = 17.5\text{kWh}$ on the lower and $2 \cdot 17.5 = 35\text{kWh}$ on the upper end. And for the RTX3060 yields $500 \cdot 0.15\text{kW} \cdot 30 \cdot 7\text{s} \div 60 \div 60 = 4.375\text{kWh}$ on the lower and $2 \cdot 4.375 = 8.75\text{kWh}$ on the upper end. Rounding the sum of them up to 45kWh and adding an extra 30% overhead for running the rest of the components of the server, results in an upper boundary of 58.5kWh consumed during the the rest of the trainings.

Feature extraction was running on a CPU, with the entire server consuming 200 Watts during the process. The entire duration while feature extraction was running is around 2 weeks. The total power consumption of the feature extraction was $0.2\text{kW} \cdot 14\text{d} \cdot 24\text{h} = 67.2\text{kWh}$.

In summary this project had the following environmental impact, calculating with the average of 0.25€/kWh for the price of the electricity [8] and 0.2kgCO₂e/kWh for the emission [9]:

Part	Consumption	Price	Emission
feature selection	104kWh	26€	20.8kgCO ₂ e
rest of the experiments	58.5kWh	14.6€	11.7kgCO ₂ e
feature extraction	67.2kWh	16.8€	13.4kgCO ₂ e
Total (+10% overhead; rounded up)	260kWh	65€	52kgCO ₂ e

Table 4.1: Sustainability

For reference, this number is a bit less than the average Spanish household’s monthly power consumption of 324kWh. [10]

4.1.2 Production

This project, whether implemented in a production, clinical or research setting, has the potential to significantly enhance sustainability in its respective fields. Acquiring dMRI data typically requires 10-40 minutes, depending on the specific parameters, whereas obtaining a T1 image takes only about 8 minutes, making data acquisition a considerable time-saving step. Additionally, dMRI data demands extensive and labor-intensive preprocessing. **Accelerating clinical or research workflows by a factor of 5** not only saves time but also increases the capacity for data collection or patient processing by the same factor.

Synthesizing a single record of relative connectivity or diffusion FA/MD takes only a few seconds on a GPU and the radiomic feature extraction takes around 20 minutes beforehand. This translates into the approximate energy demand of $200W \cdot (5s \div 60 + 20m) \div 60 = 67Wh$ of synthesizing a record. It can be argued that the time saved with the data acquisition is lost with the time it takes to extract the radiomic features, but neither the doctor (or MRI operator) and patient needs to be present during the computation of the feature extraction. Assuming an MRI machine has a consumption of 25-70kW [11] and calculating with an average of 50kW, and an average of 25m for the data acquisition of a dMRI record, adds up to the power requirement of $50kW \cdot 25m \div 60 = 21kWh$ per record. Adding up the total energy requirements of T1 data acquisition and record synthesis is $50kW \cdot 8m \div 60 + 67Wh \div 1000 = 7kWh$ per record. This means that **this method could be 3 times more sustainable than the traditional approach**. And it would return the energy consumption of the development phase in the data acquisition of $260 \div (21 - 7) = 19$ records, this is naturally a miniscule number compared to how many MRI records are being done in the world.

4.2 Economic Aspect

4.2.1 Cost

The price of the consumed electricity during the development phase was 65€ out of which only around half was paid out of the author’s (my) pocket, as the other half was paid by my colleagues and their connections whom donated computational power during the feature selection, as well as the free service provides Google and Kaggle.

Billing this project would realistically consists of 3 parts, the salary of the author, the price of the server which the project was developed on, and the power consumption of said server. Moving on from the power consumption, which is already thoroughly calculated, the price of the server

and salary of the author would be somewhat related. As the project could be executed on a weaker machine as well, but then it would take more time and more careful software design. During the development process, the two limiting factors were RAM and disk storage requirements. A lot of effort went into figuring out effective data structures, and clever memory footprint optimizations.

In conclusion, the minimum hardware which this project could be feasibly executed on is 32GBs of RAM, Intel Core i5-12600K (or similar), Nvidia RTX3060 (or similar), and 256GBs of storage. The current cost (new parts ordered from Amazon) of such server (with 'cheap' consumer grade hardware) would be around 300€ for the GPU, 150€ for the CPU, 50€ for the RAM, 25€ for the SSD, and 150€ for the motherboard, adding up to 675€. The main limiting factors in this configuration are the RAM, which was utilized up to 128GBs during development; and disk storage, which was utilized up to 300GBs. The extra RAM and storage would cost an additional 200€ and 25€ totalling at a new sum of 900€.

Approximately 500 hours of man hours was spent on the development of this project. Adjusting the my last hourly wage as a mid-senior software engineer of 37€ in Denmark, to Spanish salaries [12] would yield an hourly wage of 21€. Meaning the total charge would be $21€ \cdot 500h = 10500€$. Thus the billing for the project would be:

Part	Price
Cumulative Salary	10500€
Server Components	900€
Electricity	65€
Total	11465€

Table 4.2: Billing

4.2.2 Return

This project by all means, is a proof of concept, checking the viability of this approach. More information on the exact conclusions are in chapter 5, but the potential return value of this project is huge.

As stated in the previous subsection 4.1.2, this project has the potential to accelerate the clinical and/or research workflows by a factor of 5. The economic implications are applicable for both clinical and research workflows. In the clinical workflow, **this could increase the number of patients processed by a factor of 5**, with minimal extra cost. Especially compared to the alternative of buying 4 additional MRI machines, and hiring operators for them. In a research workflow it probably has less of an economic impact, but more of a logistical impact. As it could simplify the data acquisition, thus **allowing researchers to have up to 5 times more data acquired** with minimal extra resources invested. But even more importantly it opens the door of processing past anatomical MRI records, as they are much more common than dMRI records, virtually **increasing the available data for researchers by several magnitudes** (depending on the exact application of course).

4.3 Social Aspect

4.3.1 Development and Collaborations

The development of the project mainly required collaboration from Estela Camara Mancha (external thesis supervisor and project originator) and Alfredo Vellido Alcacena (internal thesis supervisor). Estela being the project originator, this project demanded her time the most, in the neighborhood of 40-50 hours **TODO**. Alfredo mostly helping with the formalities and miscellaneous nuances, had a demand of 10-15 hours **TODO** of his time. Additionally Estela's colleague Vasiliki Bikou also spent a good chunk of her time on catching me up to speed with the contextual information of the project. And lastly my good friends Botond Lovasz, Andris Gyori and Daniel Csepregi-Horvath donated computational power, and required a few hours of their time to set up the worker nodes on their hardware. I especially want to thank Botond for using his connections and giving me access to the H100 state of the art tensor core GPU.

4.3.2 Inclusivity

The only possible consideration for age, gender, sex, and cultural diversity; is sex, as males and females have slightly different brain structures [13]. The rest are not applicable to this project. For the used control records, there are 17 male and 15 female records, which is a relatively even split; and for the patient records, there are 25 male and 13 female records, which is a bit unbalanced. This theoretically could negatively impact the under represented group if there are truly any differences between the two sexes that matter from the model's perspective. However in the case of the project due to the very limited number of records, it was not an option to discard 1/3rd of the patients, to have the sexes completely balanced. And it would also need further experimentation to determine if this truly impacts this project or not.

This potential difference was overlooked during most of the project's lifetime, but it should have been included as another constant ratio to be kept during the train/validation/test splitting, which was covered in subsection 2.2.1. Due to limited time and resources, the models will not be re-trained with this new rule in mind, and this is something that will be included in the Future Improvements 5.1 section.

Conclusions

5.1 Future Improvements

Further investigating the sex imbalance issue discovered in subsection 4.3.2, reveals that with the used seed for the experimentation is not terribly imbalanced for the most part, but there are definitely room for improvement by enforcing a constant ratio. The male/female ratio for the control record splits are 0.49/0.67/0.67 (train/validation/test), and for the patient records are 0.62/0.5/1.

Sources of Information

- [1] José L Lanciego, Natasha Luquin, and José Obeso. “Functional neuroanatomy of the basal ganglia”. In: *Cold Spring Harbor perspectives in medicine* (2012). URL: <https://doi.org/10.1101/cshperspect.a009621>.
- [2] Olivia C Matz and Muhammad Spocter. “The Effect of Huntington’s Disease on the Basal Nuclei”. In: *Cureus* (2022). URL: <https://doi.org/10.7759/cureus.24473>.
- [3] Hyungyou Park et al. “Aberrant cortico-striatal white matter connectivity and associated subregional microstructure of the striatum in obsessive-compulsive disorder”. In: *Molecular Psychiatry* (2022). URL: <https://doi.org/10.1038/s41380-022-01588-6>.
- [4] Marius E Mayerhoefer et al. “Introduction to radiomics”. In: *Journal of Nuclear Medicine* 61.4 (2020), pp. 488–495. URL: <https://jnm.snmjournals.org/content/jnumed/61/4/488.full.pdf>.
- [5] Loïc Duron et al. “Gray-level discretization impacts reproducible MRI radiomics texture features”. In: *PLoS One* (2019). URL: <https://doi.org/10.1371/journal.pone.0213459>.
- [6] *Special Characteristics of HD Data*. 2022. URL: <https://enroll-hd.org/for-researchers/analyzing-data/special-characteristics-of-hd-data-2>.
- [7] Dylan Trundell et al. “Defining Clinically Meaningful Change on the Composite Unified Huntington’s Disease Rating Scale”. In: *Neurology* 92.15_supplement (2019), P1.8–043. URL: https://doi.org/10.1212/WNL.92.15_supplement.P1.8-043.
- [8] *Spain - Household electricity prices*. URL: <https://countryeconomy.com/energy-and-environment/electricity-price-household/spain> (visited on 12/28/2024).
- [9] B.W. Ang and Bin Su. “Carbon emission intensity in electricity production: A global analysis”. In: *Energy Policy* 94 (2016), pp. 56–63. ISSN: 0301-4215. URL: <https://doi.org/10.1016/j.enpol.2016.03.038>.
- [10] *Electricity Consumption per Dwelling*. URL: <https://www.odyssee-mure.eu/publications/efficiency-by-sector/households/electricity-consumption-dwelling.html> (visited on 12/28/2024).
- [11] *MRI and Sustainability*. URL: <https://www.siemens-healthineers.com/perspectives/MRI-reducing-energy-consumption> (visited on 12/28/2024).
- [12] *Average Software Engineering Salaries by Country*. URL: <https://codesubmit.io/blog/software-engineer-salary-by-country> (visited on 12/28/2024).
- [13] Daphna Joel. “Male or Female? Brains are Intersex”. In: *Frontiers in Integrative Neuroscience* 5 (2011). ISSN: 1662-5145. URL: <https://doi.org/10.3389/fnint.2011.00057>.

Large Figures

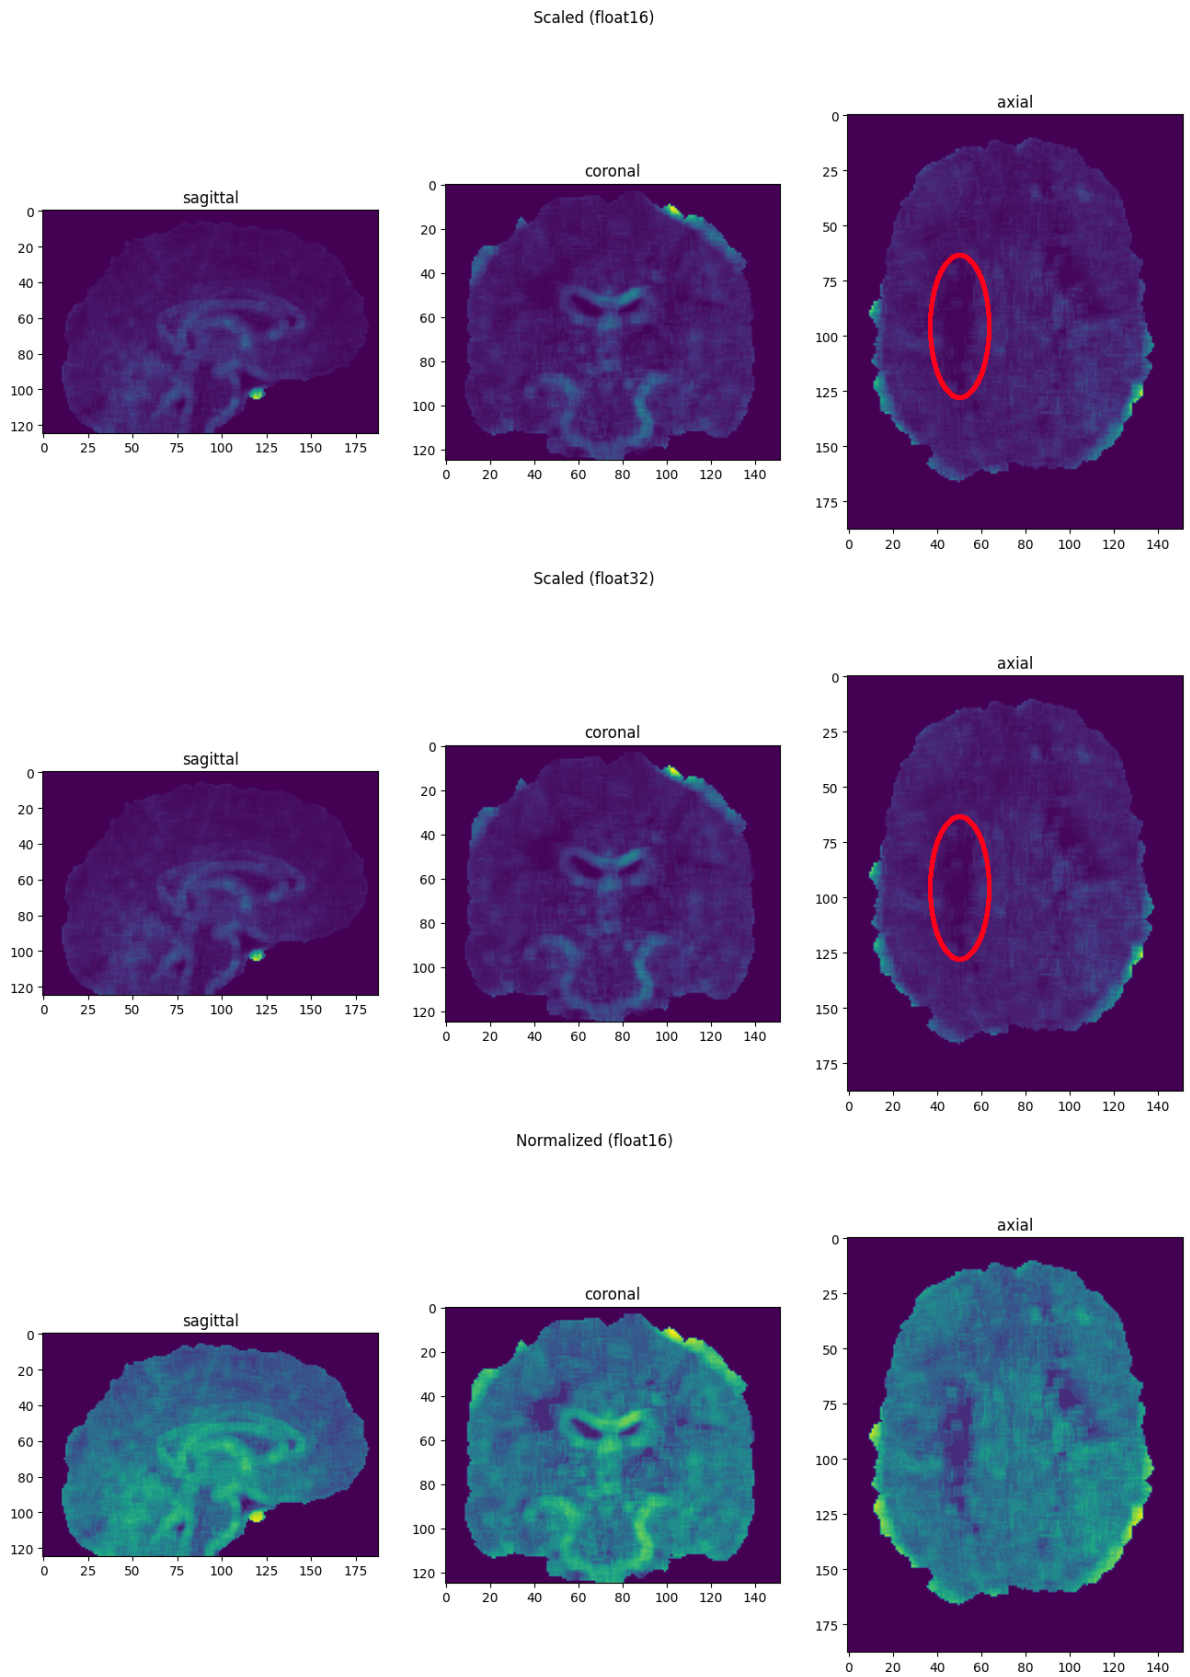


Figure A.1: Slice: GLDM Small Dependence High Gray Level Emphasis

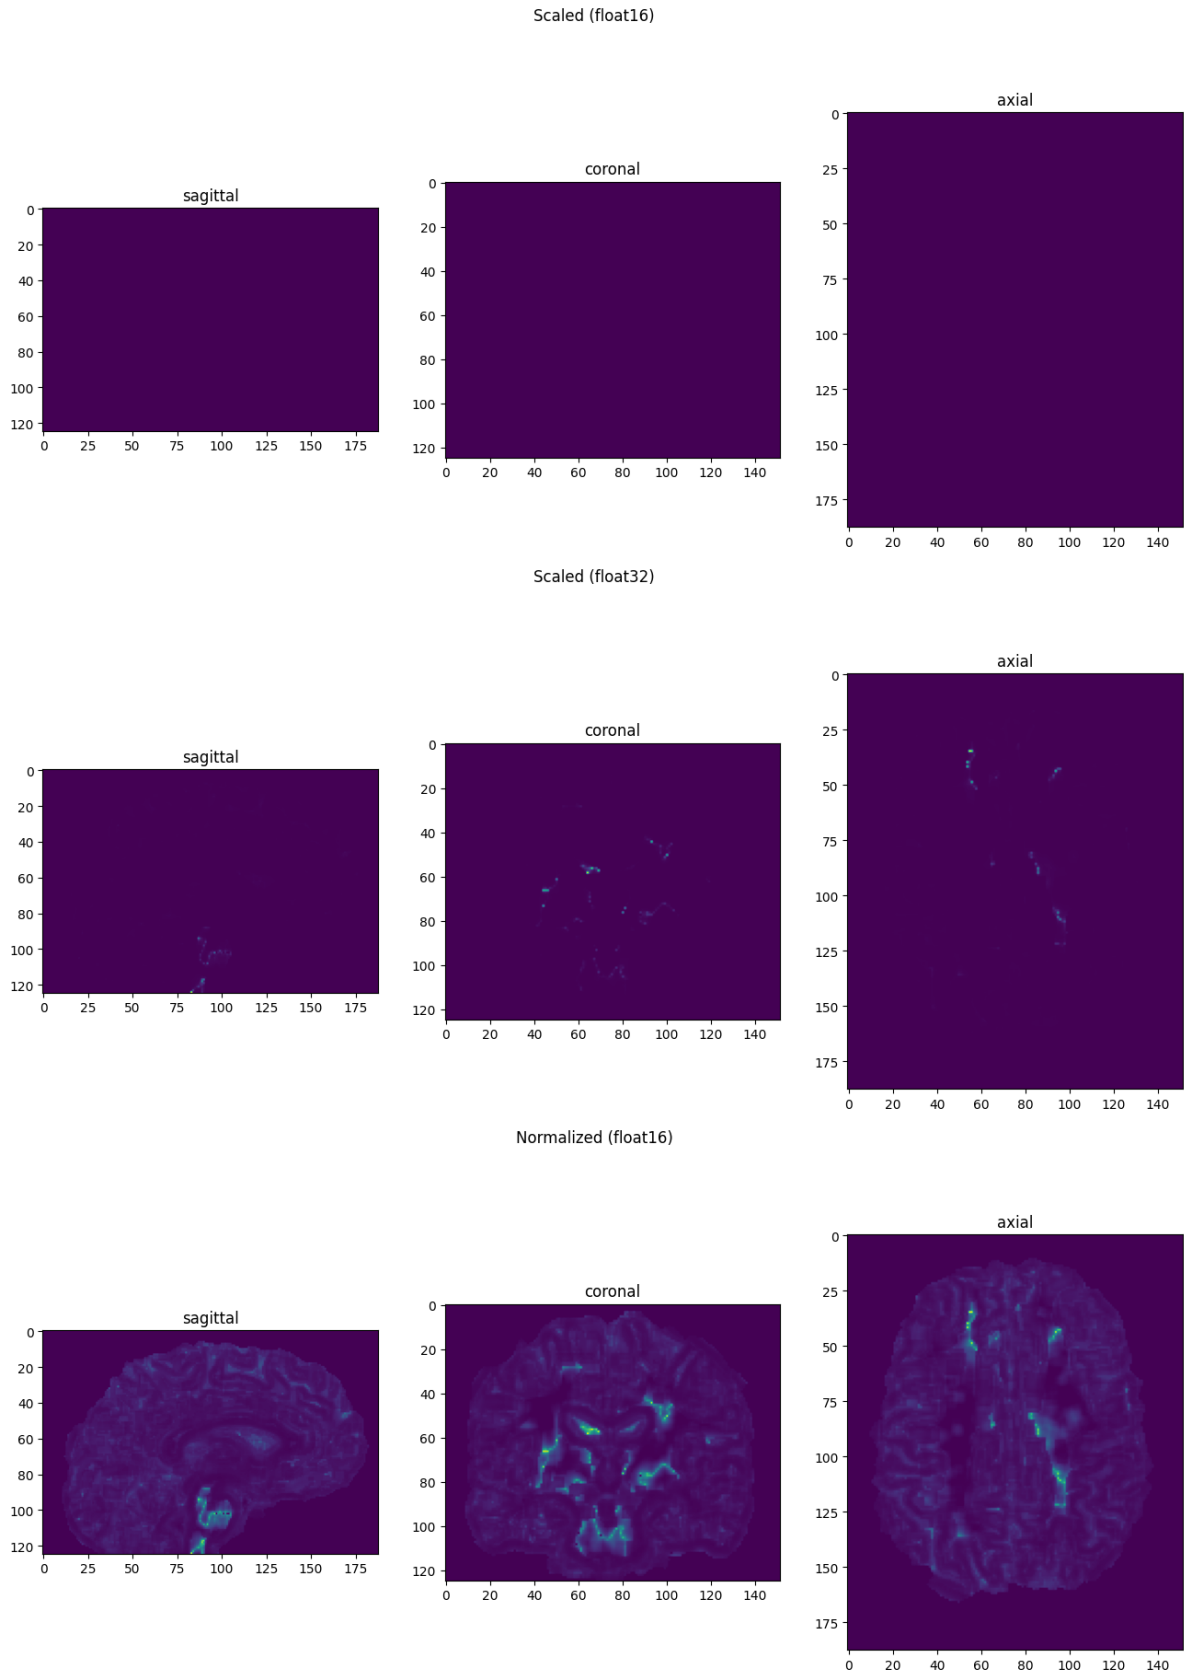


Figure A.2: Slice: NGTDM Busyness

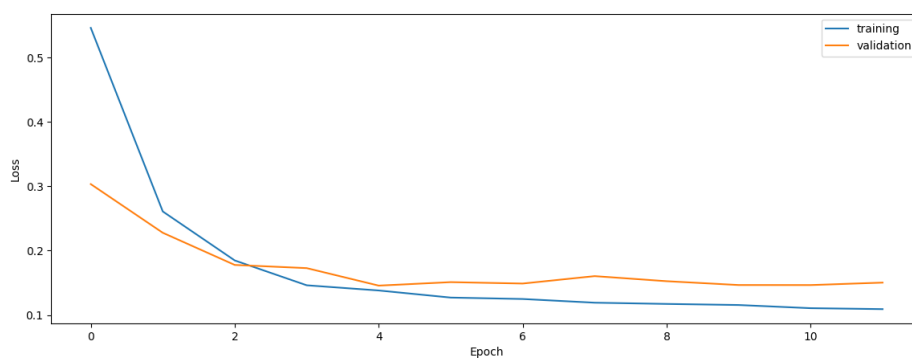


Figure A.3: Training Curve: Subcortical

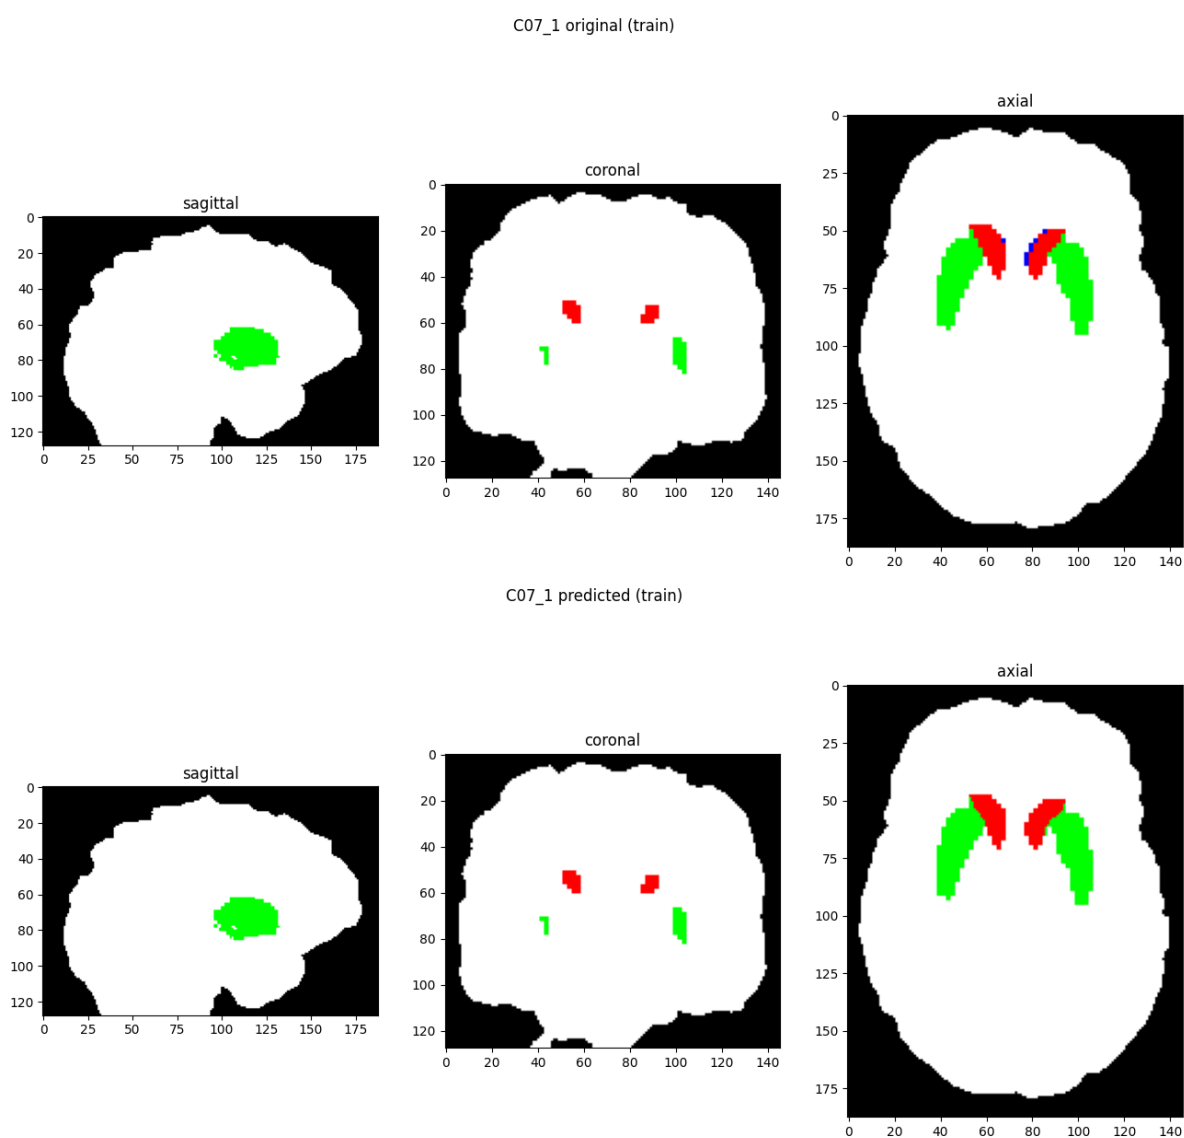


Figure A.4: Train Predictions: Subcortical

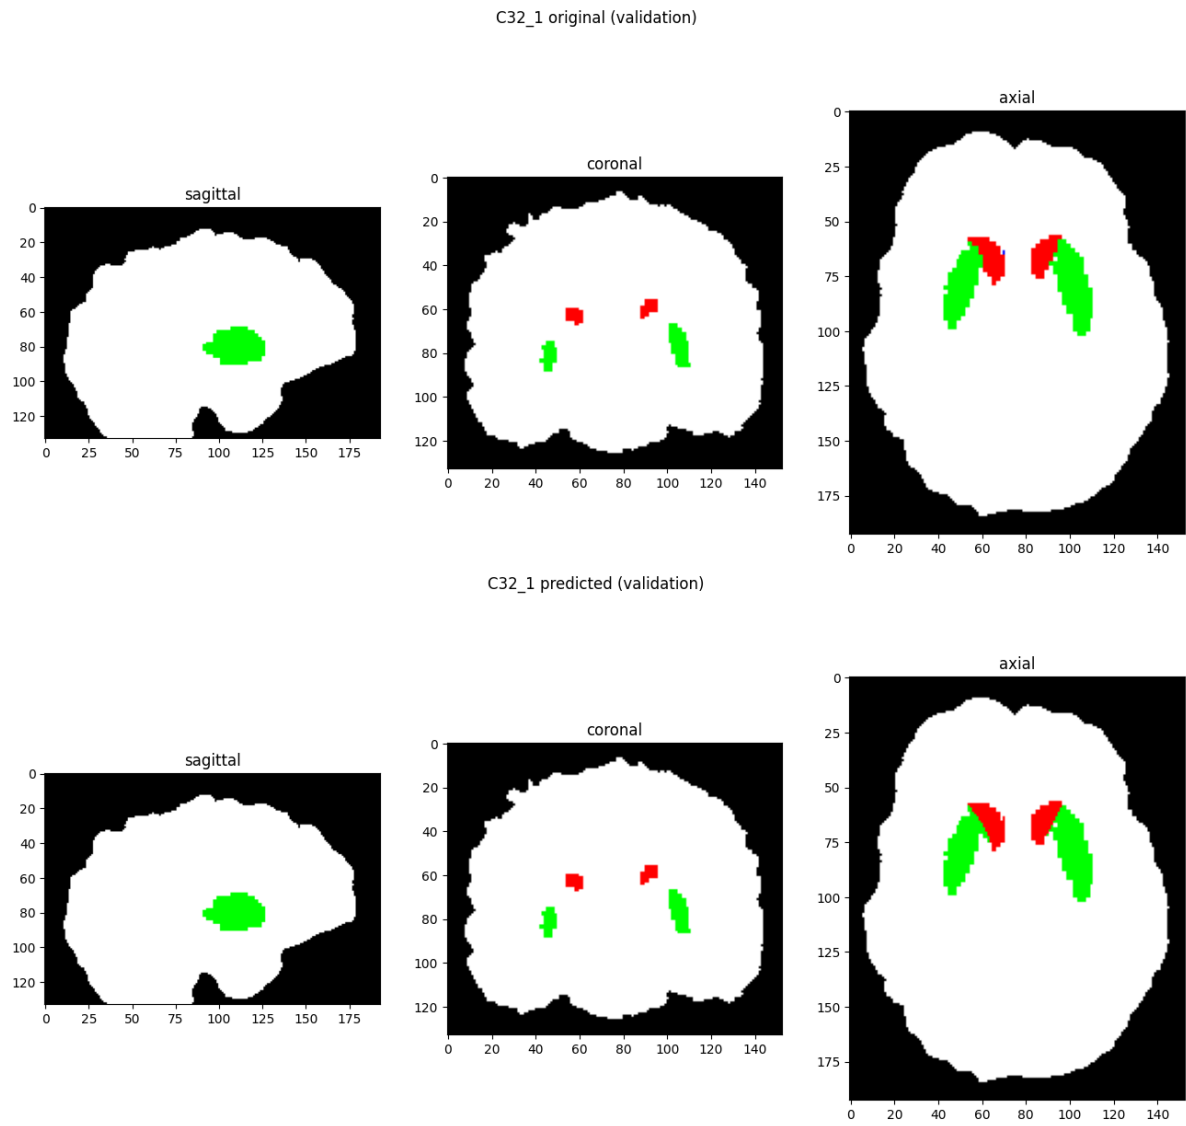


Figure A.5: Validation Predictions: Subcortical

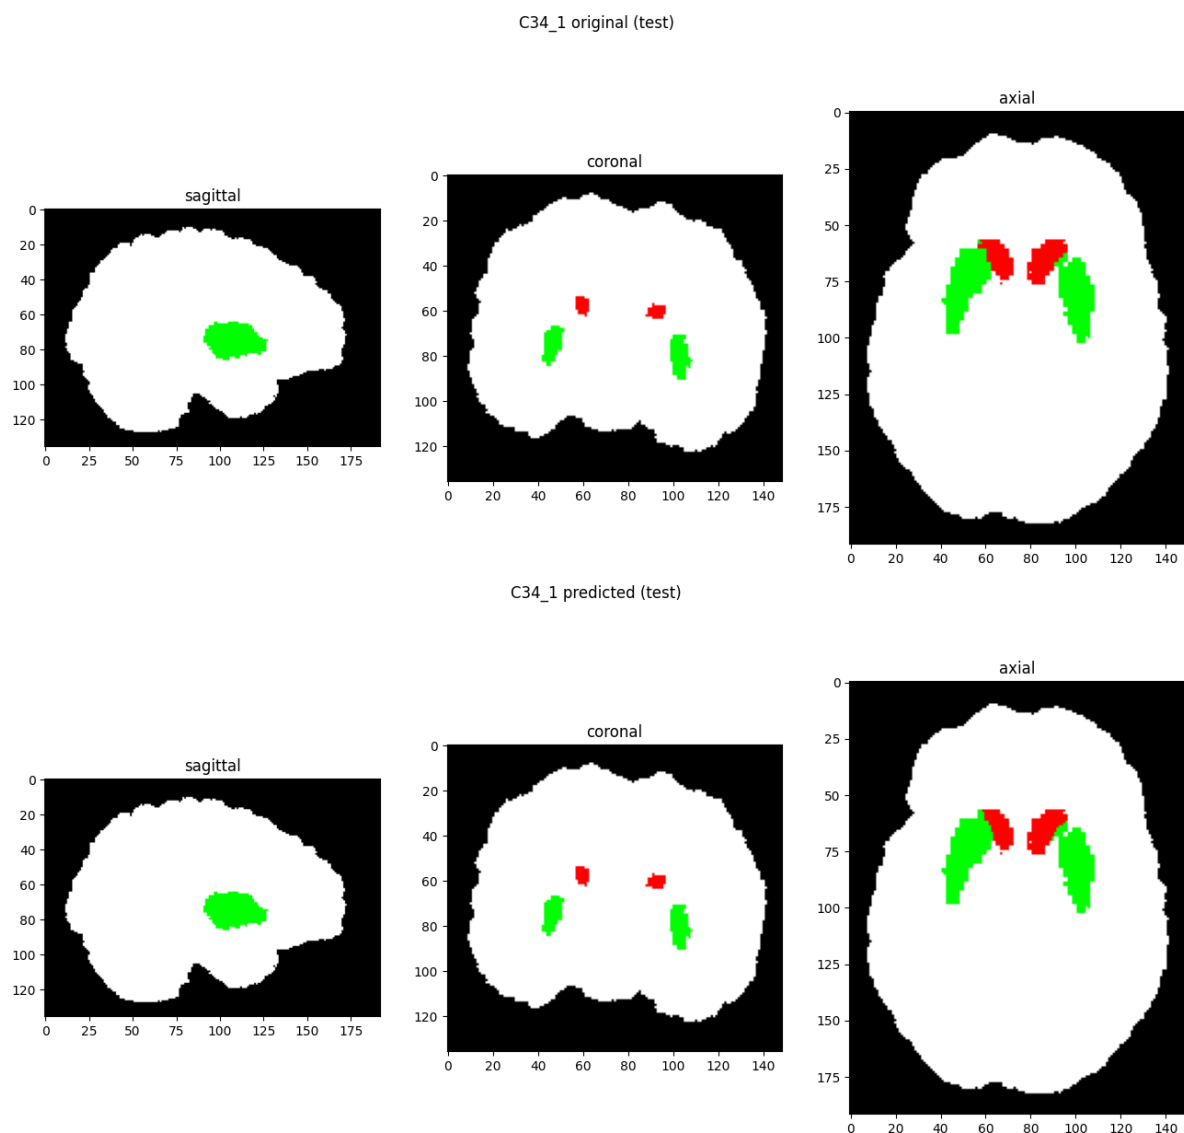


Figure A.6: Test Predictions: Subcortical

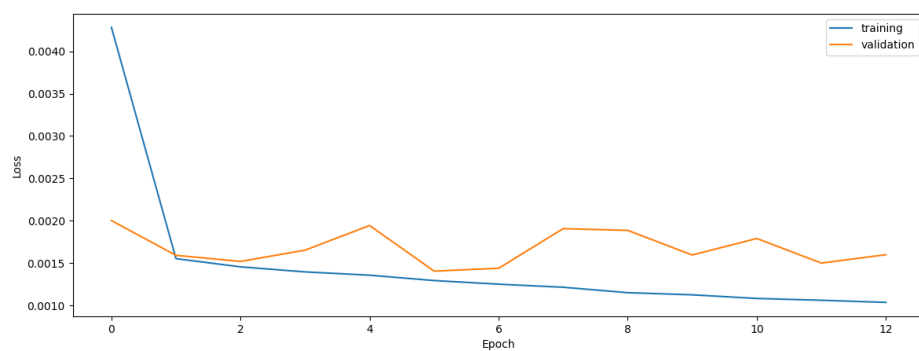


Figure A.7: Training Curve: Mean Diffusivity

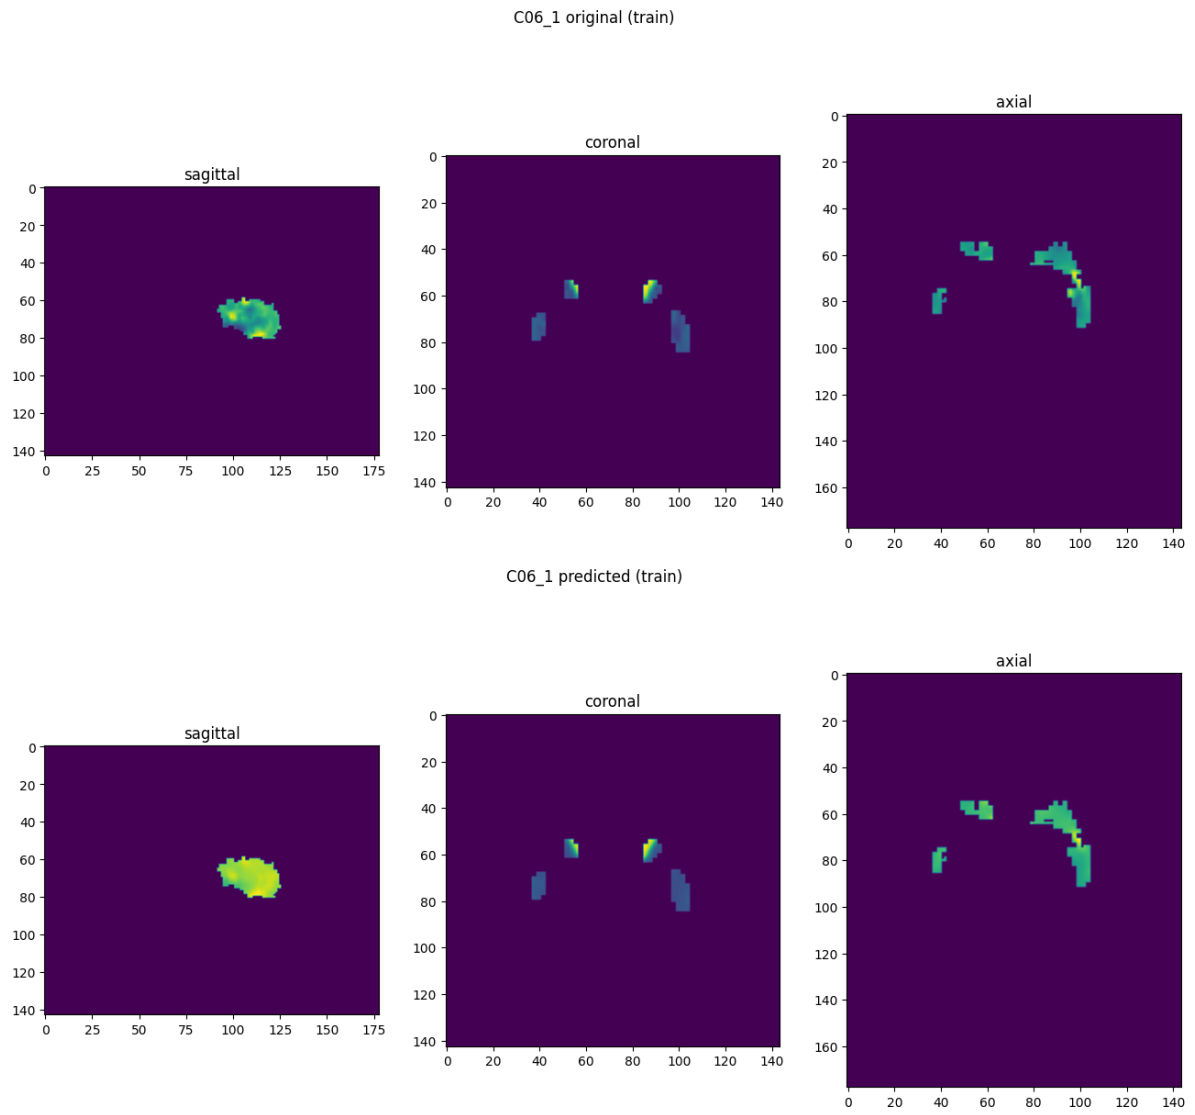


Figure A.8: Train Predictions: Mean Diffusivity

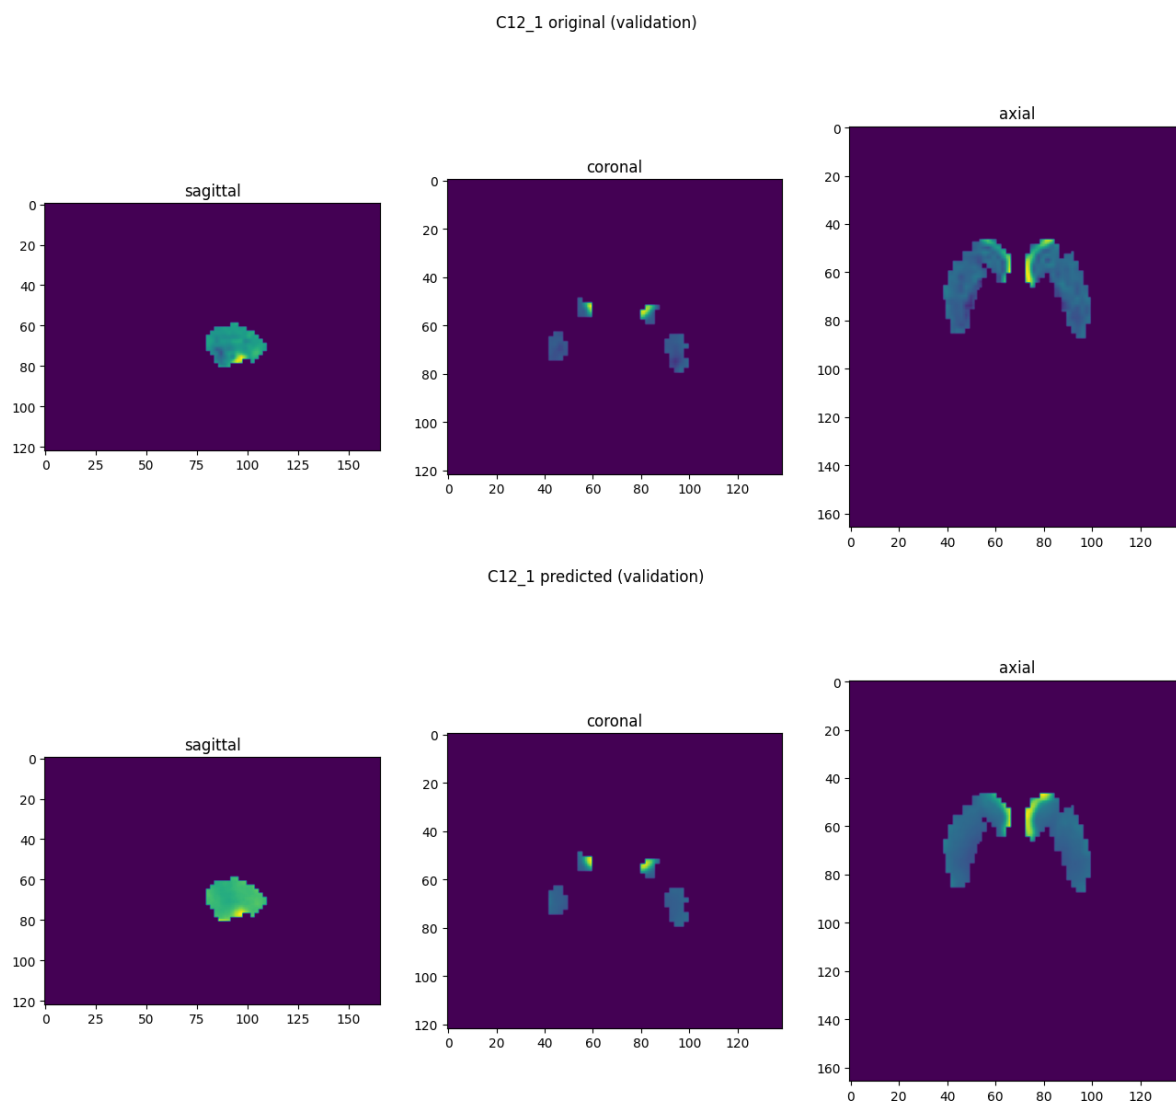


Figure A.9: Validation Predictions: Mean Diffusivity

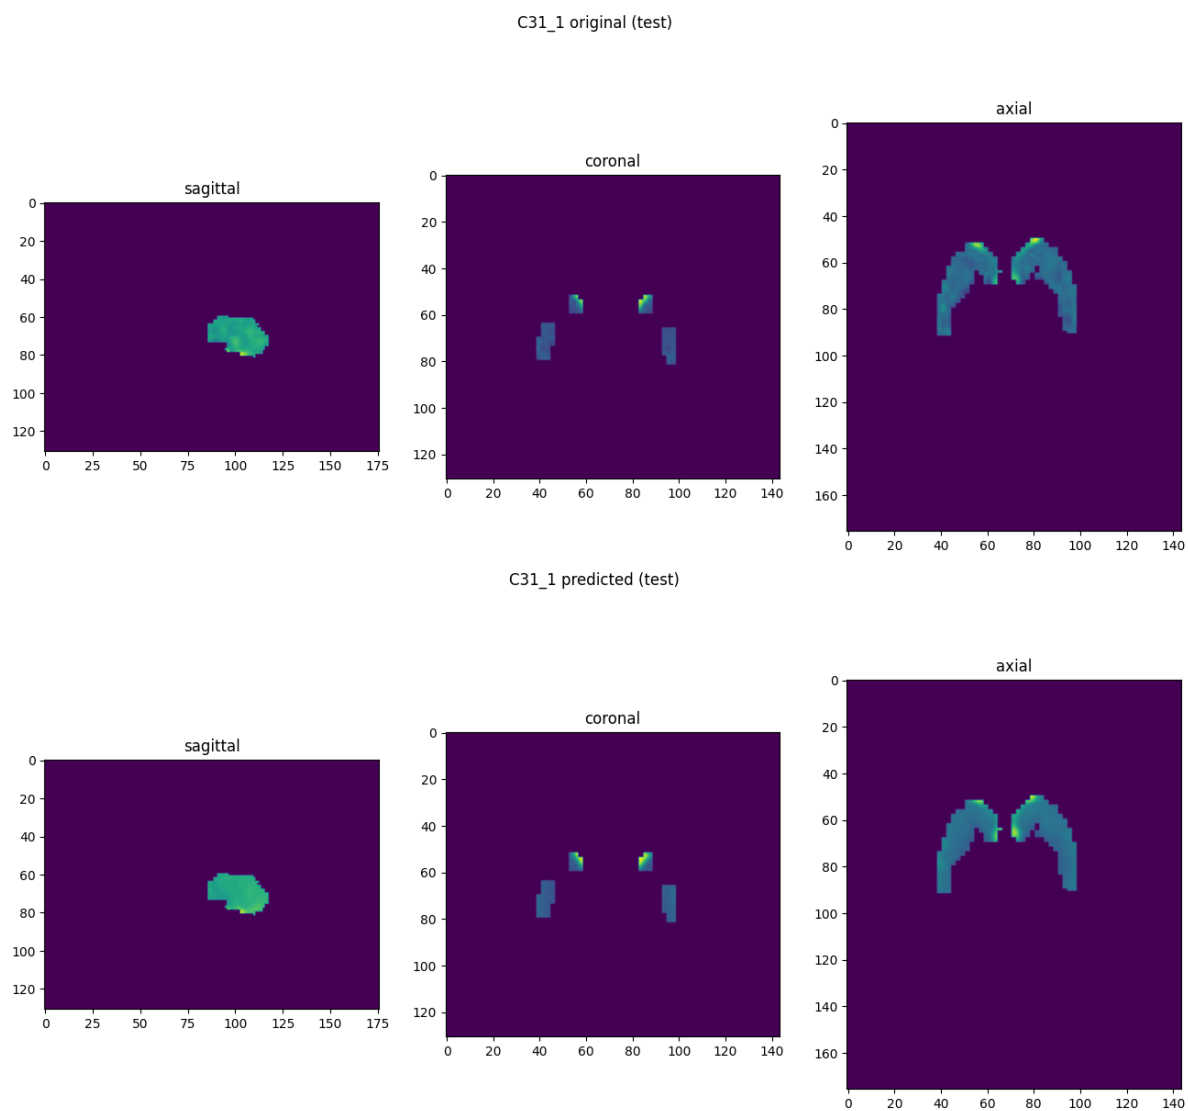


Figure A.10: Test Predictions: Mean Diffusivity

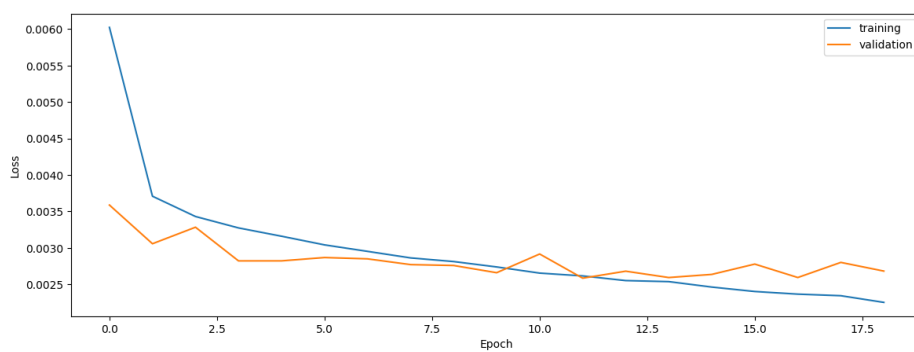


Figure A.11: Training Curve: Diffusion Fractional Anisotropy

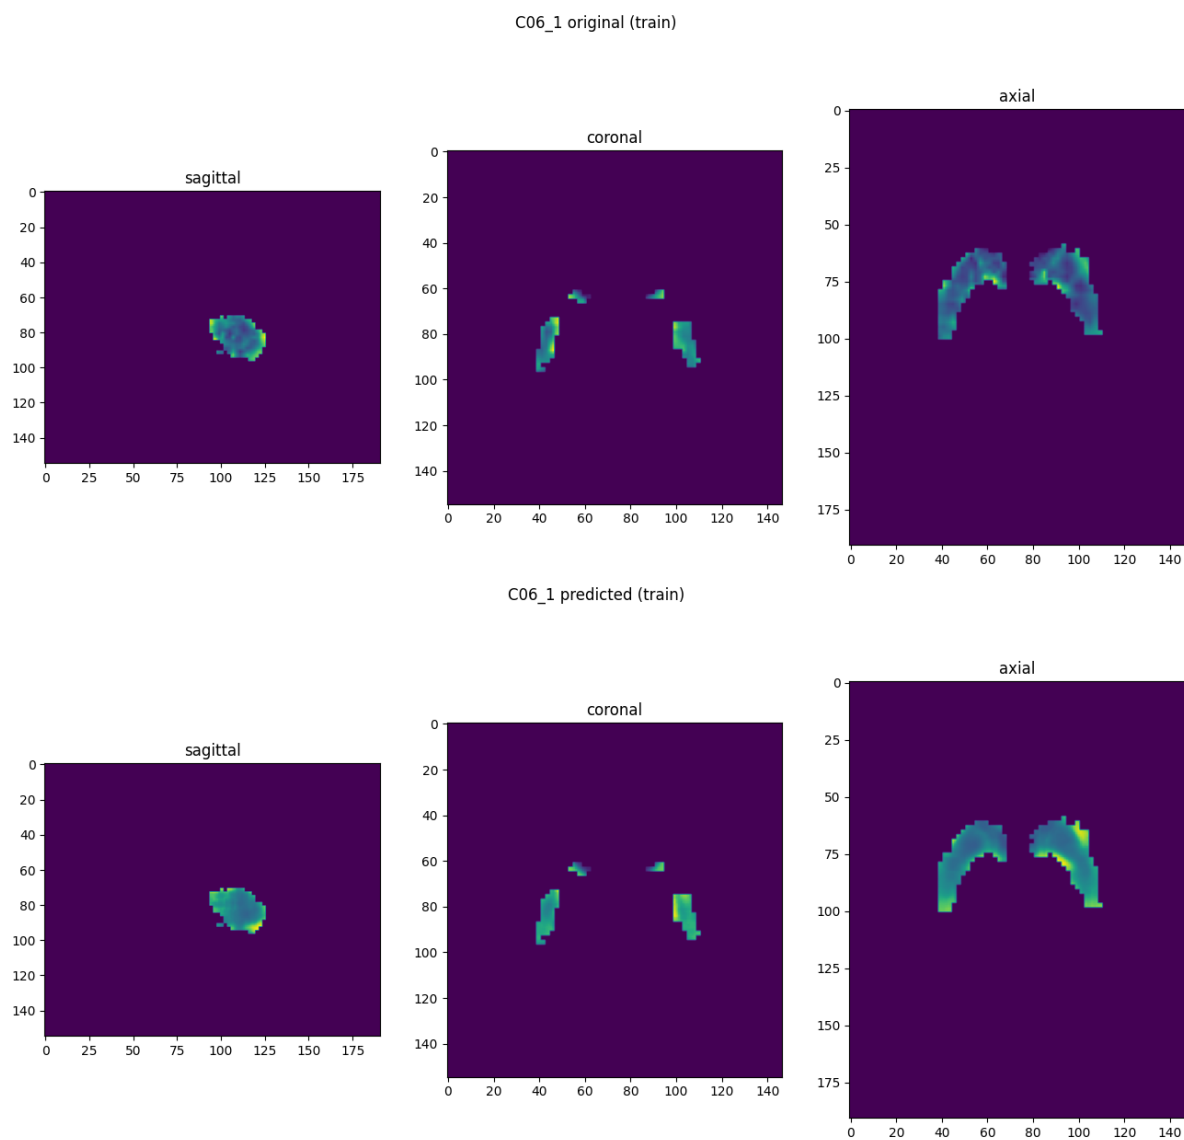


Figure A.12: Train Predictions: Diffusion Fractional Anisotropy

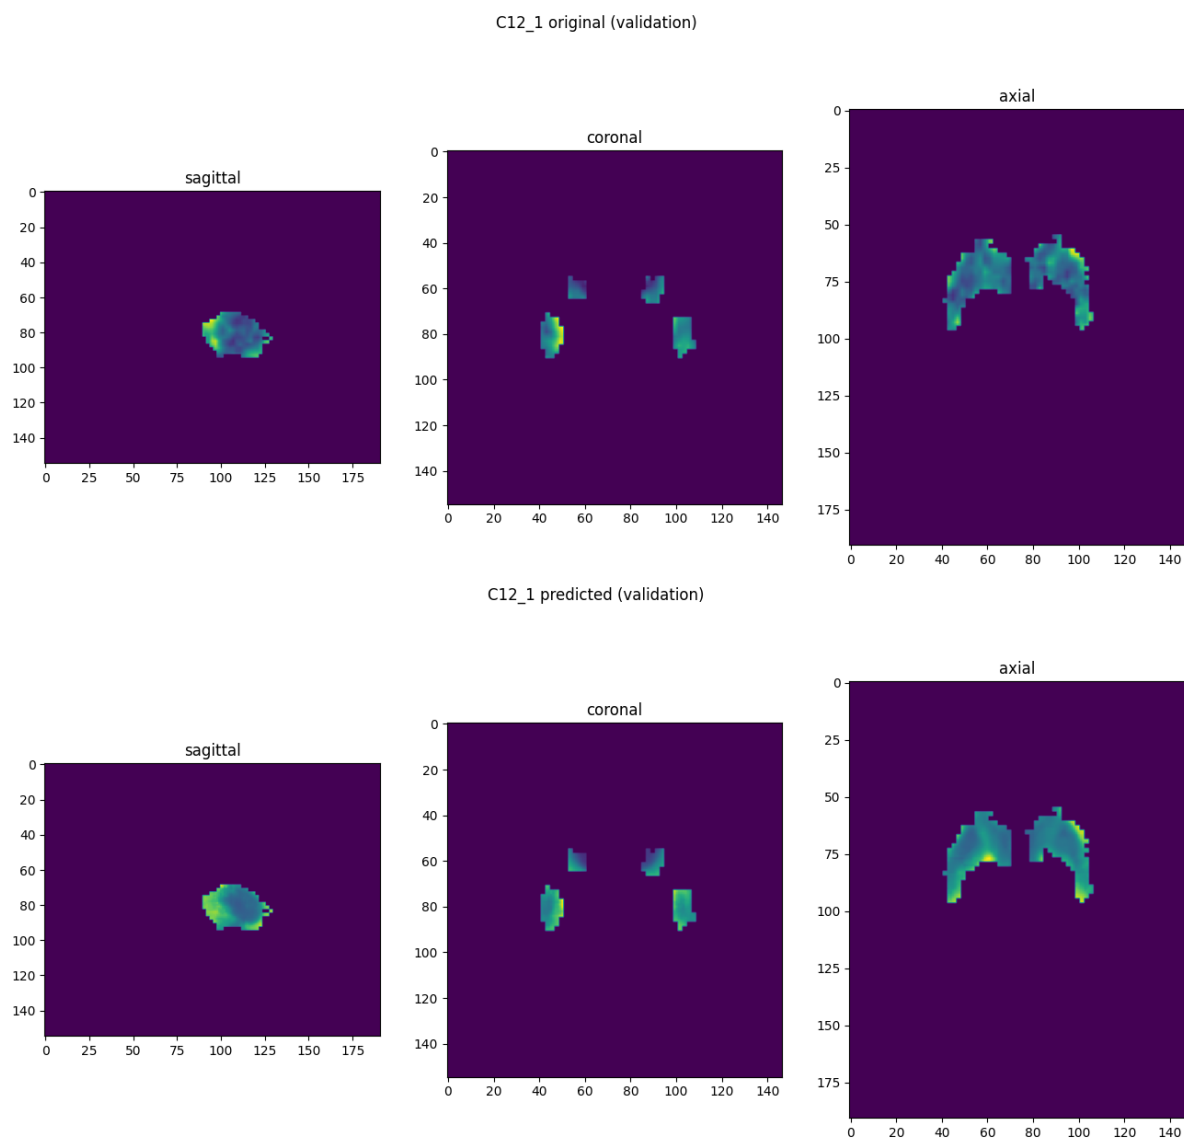


Figure A.13: Validation Predictions: Diffusion Fractional Anisotropy

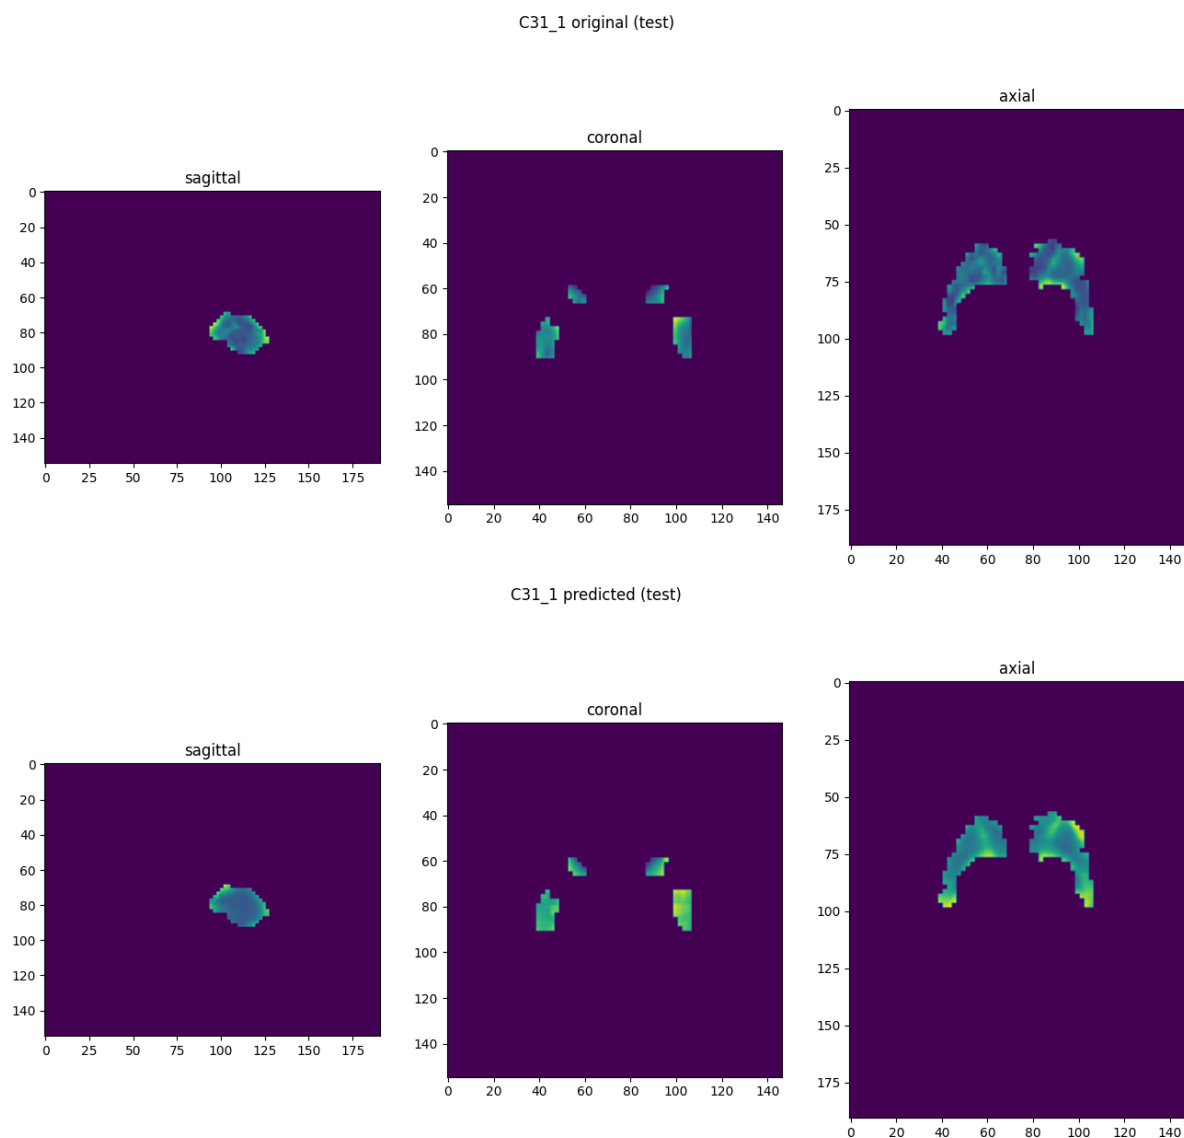


Figure A.14: Test Predictions: Diffusion Fractional Anisotropy

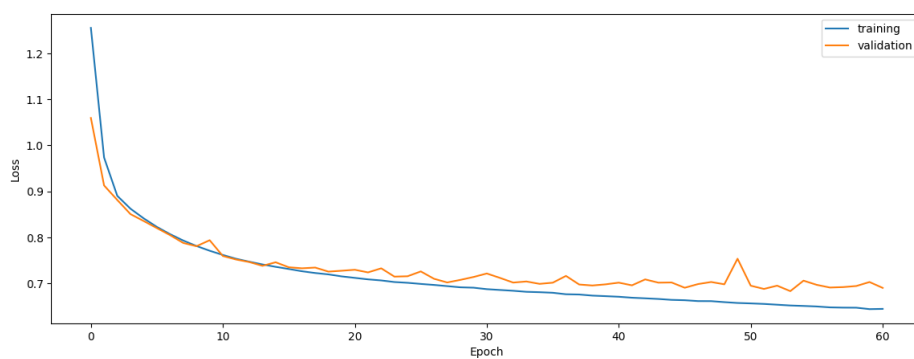


Figure A.15: Training Curve: Relative Connectivity

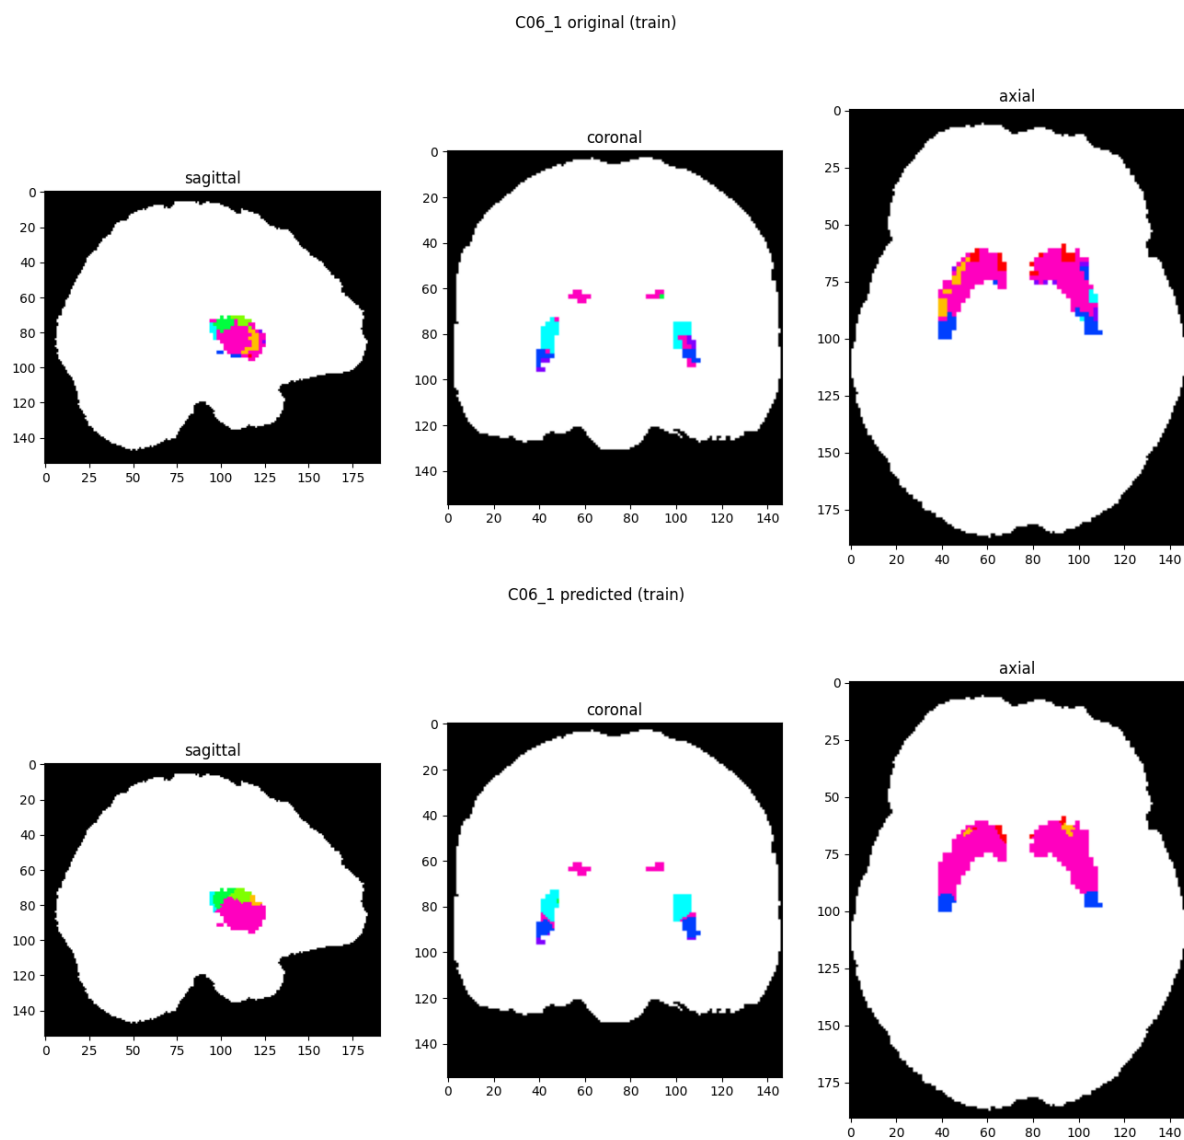


Figure A.16: Train Predictions: Relative Connectivity

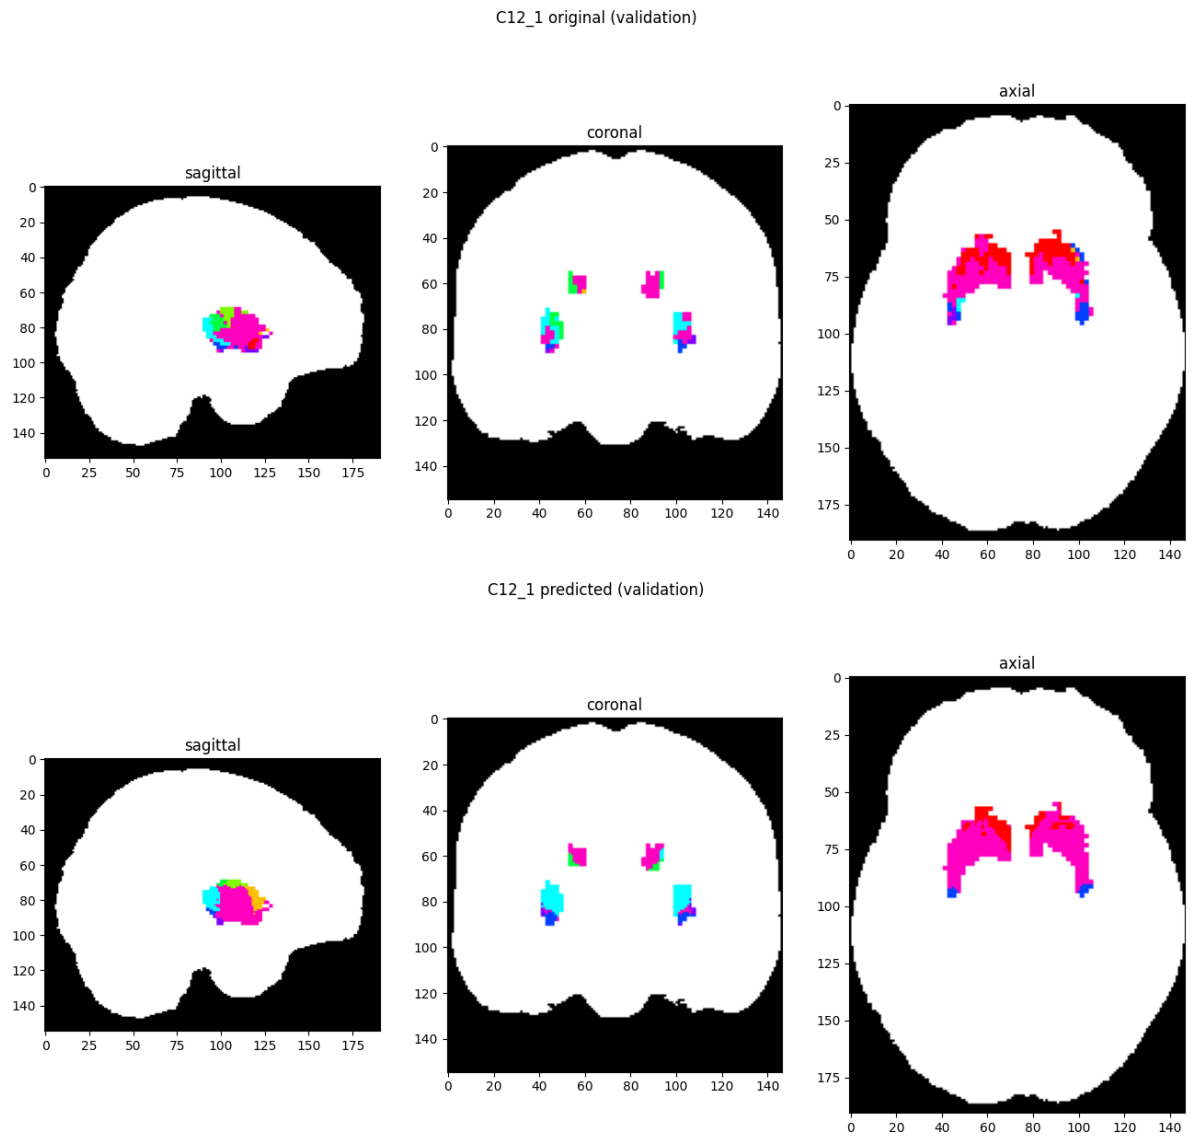


Figure A.17: Validation Predictions: Relative Connectivity

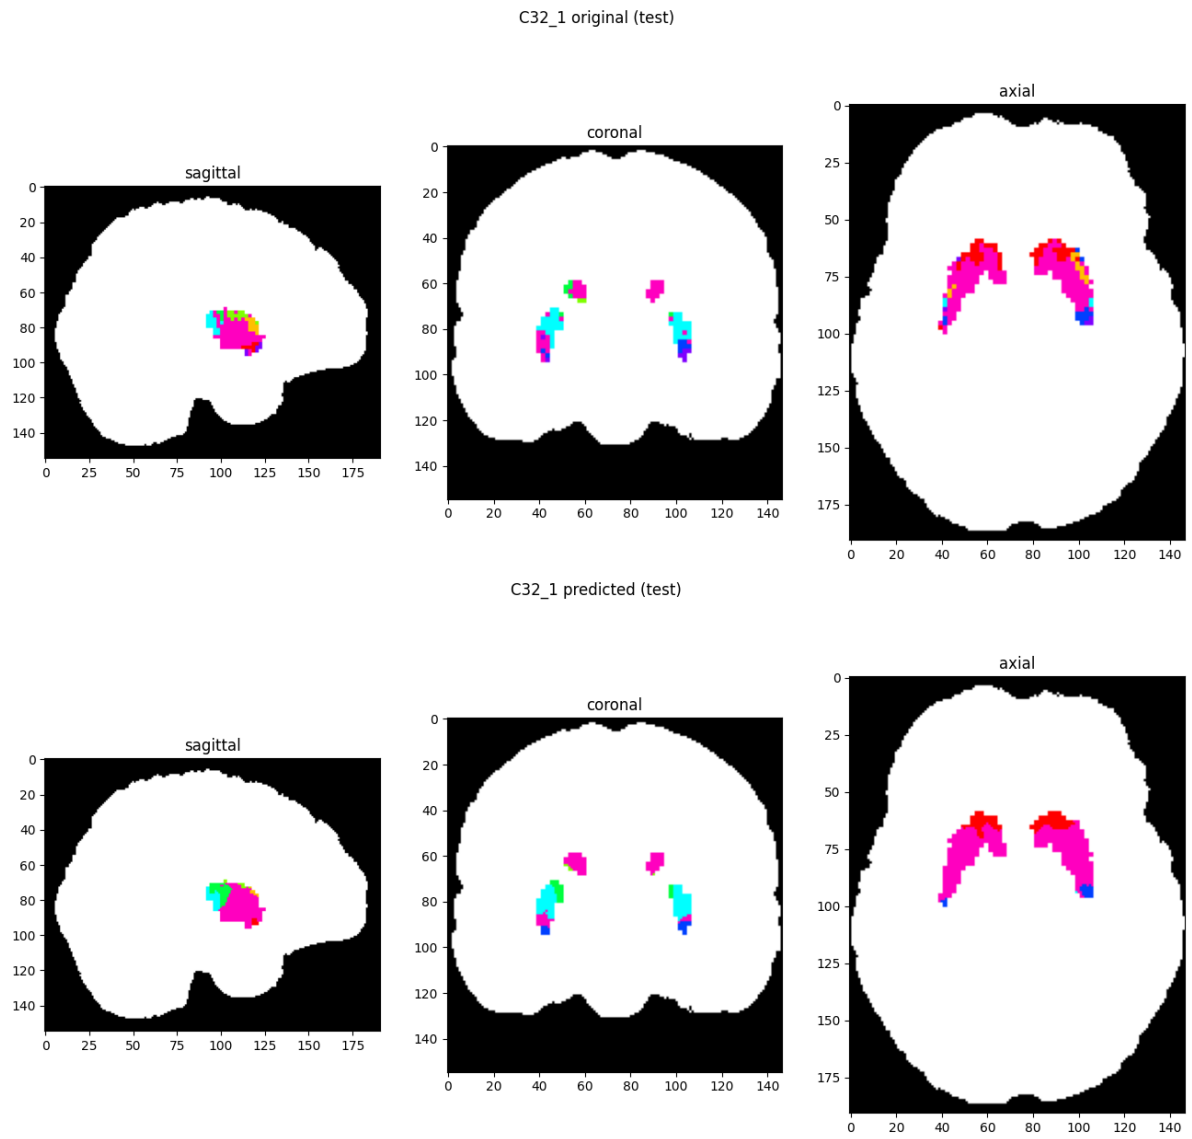


Figure A.18: Test Predictions: Relative Connectivity

Large Tables

First Order	GLCM	GLSZM
Energy	Autocorrelation	SmallAreaEmphasis
TotalEnergy	JointAverage	LargeAreaEmphasis
Entropy	ClusterProminence	GrayLevelNonUniformity
Minimum	ClusterShade	GrayLevelNonUniformityNormalized
10Percentile	ClusterTendency	SizeZoneNonUniformity
90Percentile	Contrast	SizeZoneNonUniformityNormalized
Maximum	Correlation	ZonePercentage
Mean	DifferenceAverage	GrayLevelVariance
Median	DifferenceEntropy	ZoneVariance
InterquartileRange	DifferenceVariance	ZoneEntropy
Range	JointEnergy	LowGrayLevelZoneEmphasis
MeanAbsoluteDeviation	JointEntropy	HighGrayLevelZoneEmphasis
RobustMeanAbsoluteDeviation	Imc1	SmallAreaLowGrayLevelEmphasis
RootMeanSquared	Imc2	SmallAreaHighGrayLevelEmphasis
Skewness	Idm	LargeAreaLowGrayLevelEmphasis
Kurtosis	MCC	LargeAreaHighGrayLevelEmphasis
Variance	Idmn	
Uniformity	Id	
	Idn	
	InverseVariance	
	MaximumProbability	
	SumEntropy	
	SumSquares	

GLRLM	NGTDM	GLDM
ShortRunEmphasis	Coarseness	SmallDependenceEmphasis
LongRunEmphasis	Contrast	LargeDependenceEmphasis
GrayLevelNonUniformity	Busyness	GrayLevelNonUniformity
GrayLevelNonUniformityNormalized	Complexity	DependenceNonUniformity
RunLengthNonUniformity	Strength	DependenceNonUniformityNormalized
RunLengthNonUniformityNormalized		GrayLevelVariance
RunPercentage		DependenceVariance
GrayLevelVariance		DependenceEntropy
RunVariance		LowGrayLevelEmphasis
RunEntropy		HighGrayLevelEmphasis
LowGrayLevelRunEmphasis		SmallDependenceLowGrayLevelEmphasis
HighGrayLevelRunEmphasis		SmallDependenceHighGrayLevelEmphasis
ShortRunLowGrayLevelEmphasis		LargeDependenceLowGrayLevelEmphasis
ShortRunHighGrayLevelEmphasis		LargeDependenceHighGrayLevelEmphasis
LongRunLowGrayLevelEmphasis		
LongRunHighGrayLevelEmphasis		

Table B.1: Voxel Based Radiomic Features

3D Shape
MeshVolume
VoxelVolume
SurfaceArea
SurfaceVolumeRatio
Sphericity
Maximum3DDiameter
Maximum2DDiameterSlice
Maximum2DDiameterColumn
Maximum2DDiameterRow
MajorAxisLength
MinorAxisLength
LeastAxisLength
Elongation
Flatness

Table B.2: Shape Based Radiomic Features

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	58.3	64.9	59.7	60.0	64.3	61.1	60.9	65.0	62.5	92
2.	single_vox-single_targets	66.1	67.1	61.4	65.2	69.0	64.6	65.7	69.1	66.1	1576
3.	single_vox-single_roi	62.1	65.4	58.2	62.5	67.2	61.5	63.0	67.3	63.5	304
4.	single_vox-single_brain	66.1	66.9	66.3	65.9	69.4	66.5	66.4	69.3	67.7	198
5.	single_vox-many_brain	64.8	66.7	63.7	64.4	68.4	64.1	64.8	68.4	65.7	474
6.	many_vox-single_brain	78.6	77.7	77.4	78.5	79.4	77.5	78.7	79.0	78.4	934
7.	many_vox-CLR	80.0	79.3	79.6	80.1	81.1	79.5	80.4	80.9	80.0	828
8.	many_vox-CL	79.6	79.4	76.6	79.6	80.8	76.9	80.7	81.1	78.6	828
9.	many_vox-CR	81.9	82.2	79.8	82.3	83.5	79.9	81.9	83.2	79.3	828
10.	many_vox-HLR	78.2	79.0	74.6	77.9	78.6	77.1	78.2	78.7	78.6	828
11.	many_vox-HL	76.7	73.9	73.2	76.1	75.9	74.7	78.2	78.2	78.7	828
12.	many_vox-HR	79.3	80.9	73.7	79.4	80.3	76.6	78.2	78.9	76.6	828
13.	many_vox-HLR-clinical_CAP	80.7	76.4	81.0	80.3	77.1	81.1	80.7	78.3	79.4	829
14.	many_vox-HLR-clinical_UHDRS	76.8	73.3	76.6	76.5	74.3	77.5	76.9	75.6	75.7	832
15.	many_vox-HLR-clinical_all	75.0	66.7	72.9	74.1	72.1	75.3	74.5	73.4	73.4	919
16.	many_vox-CHLR	79.3	80.5	78.5	79.3	81.2	80.0	79.5	81.2	81.0	828
17.	many_vox-CHL	77.5	77.4	74.3	77.5	79.1	76.6	79.0	80.4	79.3	828
18.	many_vox-CHR	81.2	82.7	79.9	81.3	83.3	81.1	80.6	82.6	80.7	828
19.	many_vox-CLR_coords	79.5	79.3	79.0	79.7	81.0	79.0	80.0	80.8	79.6	831
20.	many_vox-CLR_scale	79.6	79.0	78.9	79.8	80.6	78.8	80.0	80.3	79.3	828
21.	many_vox-CLR_b50	80.1	79.5	77.8	80.2	80.2	77.9	80.5	80.1	78.4	828
22.	many_vox-CLR-balance_025	51.6	68.5	73.9	80.3	81.0	79.1	80.5	80.7	79.6	828
23.	many_vox-CLR-balance_050	45.8	66.6	72.7	79.7	80.9	79.1	79.9	80.7	79.6	828
24.	many_vox-CLR-balance_075	41.8	63.5	70.6	80.6	81.0	79.0	80.8	80.8	79.6	828
25.	many_vox-CLR-balance_100	41.1	63.1	67.9	79.1	80.1	78.0	79.3	79.8	78.8	828
27.	many_vox-CLR-reinclud	80.5	79.1	79.3	80.7	81.1	79.3	81.1	80.9	79.7	828

Table B.3: Hyperparameter Tuning: Diffusion Fractional Anisotropy - Native T1

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	63.1	70.1	62.2	66.2	69.8	68.2	66.6	69.9	69.2	92
2.	single_vox-single_targets	70.6	71.2	64.3	69.4	71.3	66.5	69.5	71.1	67.6	1576
3.	single_vox-single_roi	67.1	69.0	65.5	66.2	69.8	66.7	66.5	69.8	67.6	304
4.	single_vox-single_brain	67.1	70.6	64.6	67.0	70.8	67.0	67.3	70.7	68.0	198
5.	single_vox-many_brain	67.6	70.3	66.5	67.3	70.8	67.5	67.5	70.8	68.4	474
6.	many_vox-single_brain	81.0	80.7	78.8	80.9	80.5	79.4	81.1	80.5	79.9	934
7.	many_vox-CLR	80.1	79.7	76.3	80.5	79.8	77.8	80.8	79.9	78.7	828
8.	many_vox-CL	77.2	78.1	72.5	77.9	78.5	77.2	79.1	79.5	79.7	828
9.	many_vox-CR	79.9	80.0	77.2	80.6	79.3	78.3	80.1	79.0	78.3	828
10.	many_vox-HLR	79.9	74.3	78.6	79.5	76.2	78.5	79.7	76.1	80.5	828
11.	many_vox-HL	72.1	58.9	71.4	72.6	69.4	71.5	75.3	72.2	76.3	828
12.	many_vox-HR	75.6	75.7	74.9	75.7	76.2	75.0	74.2	74.7	75.0	828
13.	many_vox-HLR-clinical_CAP	75.1	75.2	72.5	75.4	76.0	73.4	75.8	76.8	72.6	829
14.	many_vox-HLR-clinical_UHDRS	80.2	77.4	78.2	79.8	77.7	78.2	80.2	78.5	77.2	832
15.	many_vox-HLR-clinical_all	76.2	70.5	71.5	75.3	73.5	72.9	75.7	74.7	71.8	919
16.	many_vox-CHLR	75.8	74.4	72.6	76.4	75.8	76.4	76.6	75.8	77.7	828
17.	many_vox-CHL	77.4	72.1	72.6	77.6	74.2	77.3	79.2	75.8	80.3	828
18.	many_vox-CHR	75.5	75.6	73.1	76.2	76.0	75.3	75.1	74.8	75.4	828
19.	many_vox-CLR_coords	80.2	80.2	77.4	80.6	80.2	78.4	80.9	80.4	79.3	831
20.	many_vox-CLR_scale	80.8	80.3	75.9	81.2	80.1	77.5	81.5	80.2	78.4	828
21.	many_vox-CLR_b50	79.8	80.6	74.9	80.3	80.2	77.2	80.6	80.1	78.3	828
22.	many_vox-CLR-balance_025	57.0	68.0	74.6	80.8	80.0	78.2	81.1	80.2	79.2	828
23.	many_vox-CLR-balance_050	51.8	64.9	72.6	81.0	80.2	78.3	81.2	80.3	79.2	828
24.	many_vox-CLR-balance_075	47.3	62.6	71.0	80.9	79.8	77.4	81.2	80.0	78.4	828
25.	many_vox-CLR-balance_100	43.8	62.5	70.4	79.6	79.3	77.8	79.9	79.5	78.8	828
28.	many_vox-single_brain-coords	81.4	81.0	79.0	81.3	80.8	79.7	81.6	80.8	80.3	937

Table B.4: Hyperparameter Tuning: Diffusion Fractional Anisotropy - Native T1/T2

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	52.5	58.9	53.4	54.2	60.3	54.9	54.4	59.3	54.2	92
2.	single_vox-single_targets	60.1	56.7	58.8	60.3	64.0	61.4	60.5	63.8	60.8	1380
3.	single_vox-single_roi	65.2	67.1	63.3	64.0	68.9	65.6	64.3	68.6	65.2	276
4.	single_vox-single_brain	65.3	66.1	65.8	64.5	68.9	66.0	64.8	68.6	65.9	184
5.	single_vox-many_brain	60.6	62.7	61.8	61.5	66.1	62.5	61.8	65.8	62.0	460
6.	many_vox-single_brain	81.9	82.3	80.8	81.4	83.2	81.0	81.6	83.4	81.5	920
7.	many_vox-CLR	82.3	82.1	80.8	82.0	83.4	81.3	82.3	83.7	81.7	828
8.	many_vox-CL	81.8	81.3	79.8	82.5	83.9	82.9	81.8	83.5	81.6	828
9.	many_vox-CR	83.6	83.2	82.8	82.8	83.5	81.5	83.9	84.2	82.9	828
10.	many_vox-HLR	76.4	72.9	64.0	76.4	75.8	70.0	75.4	74.3	68.5	828
11.	many_vox-HL	77.0	71.8	66.3	79.2	77.9	73.2	76.7	74.4	69.3	828
12.	many_vox-HR	75.0	73.5	60.9	73.0	73.5	66.6	74.1	74.5	67.9	828
13.	many_vox-HLR-clinical_CAP	77.2	77.5	66.1	77.6	78.0	64.1	76.5	76.3	64.0	829
14.	many_vox-HLR-clinical_UHDRS	75.7	75.6	64.6	76.2	76.6	62.8	75.1	74.8	62.6	832
15.	many_vox-HLR-clinical_all	71.8	69.7	65.3	72.4	72.3	65.7	71.0	70.7	64.8	919
16.	many_vox-CHLR	80.8	80.1	75.7	80.6	81.5	79.1	80.3	81.1	78.7	828
17.	many_vox-CHL	79.9	77.7	73.9	81.2	81.9	79.6	79.6	80.0	77.5	828
18.	many_vox-CHR	81.5	82.0	77.5	80.5	81.5	79.0	81.3	82.2	79.9	828
19.	many_vox-CLR_coords	81.7	81.6	81.0	81.5	83.3	81.4	81.7	83.5	81.7	831
20.	many_vox-CLR_scale	84.4	82.9	82.0	84.1	84.4	82.4	84.3	84.8	82.6	828
22.	many_vox-CLR-balance_025	58.2	80.7	85.6	82.7	83.5	81.7	82.9	83.8	82.0	828
23.	many_vox-CLR-balance_050	55.3	79.8	86.5	84.0	84.2	82.4	84.3	84.6	82.7	828
24.	many_vox-CLR-balance_075	51.2	79.2	86.0	83.4	84.0	81.9	83.7	84.4	82.1	828
25.	many_vox-CLR-balance_100	46.2	78.2	84.8	81.9	83.1	81.2	82.1	83.4	81.5	828
27.	many_vox-CLR-reininclude	84.6	83.3	82.3	84.4	84.6	82.8	84.6	84.9	82.9	828
28.	many_vox-scale-bal50-reininclude	96.3	83.8	81.7	76.8	77.1	77.3	76.8	76.6	76.9	828
29.	many_vox-bal50-reininclude	96.2	83.1	83.9	76.9	77.1	77.7	76.9	76.6	77.3	828

Table B.5: Hyperparameter Tuning: Diffusion Fractional Anisotropy - Normalized T1

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	58.7	66.4	59.8	61.4	66.7	65.0	61.8	66.2	65.1	92
2.	single_vox-single_targets	59.8	58.0	58.8	58.8	63.9	61.5	59.0	63.8	61.4	1380
3.	single_vox-single_roi	64.3	63.0	66.7	63.0	65.8	66.1	63.3	66.0	66.2	276
4.	single_vox-single_brain	66.6	68.8	67.1	65.8	69.1	67.4	66.1	68.9	67.8	184
5.	single_vox-many_brain	67.3	68.8	66.9	66.3	69.0	67.2	66.5	68.9	67.6	460
6.	many_vox-single_brain	83.4	82.3	82.2	83.1	82.3	82.7	83.2	82.8	82.7	920
7.	many_vox-CLR	80.7	80.9	79.2	80.9	80.3	81.1	80.9	80.7	81.0	828
8.	many_vox-CL	79.1	79.8	73.8	80.4	80.3	81.0	79.5	79.5	79.1	828
9.	many_vox-CR	81.9	81.8	81.9	81.4	80.6	80.8	82.0	81.3	81.8	828
10.	many_vox-HLR	73.9	62.3	66.0	74.5	69.4	68.5	73.6	66.6	67.2	828
11.	many_vox-HL	78.1	58.6	66.3	79.9	70.1	72.1	77.7	65.1	67.3	828
12.	many_vox-HR	74.0	66.5	68.0	72.5	69.0	66.0	73.7	68.2	68.9	828
13.	many_vox-HLR-clinical_CAP	78.0	72.9	69.8	78.6	74.2	70.2	77.7	73.8	68.5	829
14.	many_vox-HLR-clinical_UHDRS	80.3	77.2	71.2	80.6	77.6	71.8	79.7	77.1	70.0	832
15.	many_vox-HLR-clinical_all	69.6	69.0	61.2	70.1	71.2	62.2	68.7	70.0	59.9	919
16.	many_vox-CHLR	79.9	73.1	75.5	79.9	75.7	78.0	79.5	74.6	77.3	828
17.	many_vox-CHL	78.9	70.7	69.7	80.4	75.9	78.1	78.9	73.0	75.2	828
18.	many_vox-CHR	72.1	73.1	69.5	71.4	72.8	69.5	72.7	73.4	72.0	828
19.	many_vox-CLR_coords	83.2	82.6	80.8	83.3	81.6	82.1	83.3	82.2	82.0	831
20.	many_vox-CLR_scale	79.9	80.3	79.1	79.9	79.6	80.8	80.0	80.0	80.8	828
22.	many_vox-CLR-balance_025	68.0	80.2	87.3	81.2	80.3	81.3	81.2	80.9	81.3	828
23.	many_vox-CLR-balance_050	61.6	78.2	87.4	82.0	80.8	81.7	82.1	81.3	81.6	828
24.	many_vox-CLR-balance_075	63.0	78.0	86.5	79.7	79.5	80.5	79.8	79.9	80.6	828
25.	many_vox-CLR-balance_100	59.3	77.4	88.9	83.4	81.4	82.0	83.4	82.0	81.8	828
28.	many_vox-brain-coords-bal50	96.5	82.4	83.6	77.6	79.9	77.1	77.3	80.1	76.7	923
29.	many_vox-brain-coords	83.0	82.5	81.8	82.7	82.4	82.4	82.7	82.9	82.3	923

Table B.6: Hyperparameter Tuning: Diffusion Fractional Anisotropy - Normalized T1/T2

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
27.	normalized-t1-many_vox-CLR-reinclud	84.6	83.3	82.3	84.4	84.6	82.8	84.6	84.9	82.9	828
1.	layers_2048	82.0	82.2	81.1	81.9	83.1	81.3	82.1	83.4	81.7	828
2.	layers_1024	84.1	83.1	82.1	84.0	84.4	82.5	84.1	84.7	82.8	828
3.	layers_512	83.2	83.1	81.5	83.1	84.3	82.2	83.2	84.6	82.5	828
4.	activation_sigmoid	83.4	82.9	81.9	83.3	84.2	82.3	83.5	84.5	82.6	828
5.	activation_relu	85.7	83.1	82.3	85.5	84.0	82.3	85.7	84.3	82.8	828
6.	activation_silu	84.7	83.1	82.7	84.6	84.3	82.4	84.7	84.6	83.0	828
7.	activation_elu	7.2	4.9	7.4	14.3	14.8	14.9	12.5	11.1	13.8	828
8.	batch_10e5	80.2	81.2	80.1	80.3	82.3	80.2	80.4	82.6	80.7	828
9.	batch_10e4	83.1	82.7	81.7	83.0	83.8	82.1	83.2	84.2	82.4	828
10.	batch_10e3	85.5	83.8	82.5	85.3	84.9	82.8	85.5	85.2	83.1	828
11.	batch_10e2	89.3	83.4	83.6	89.1	84.2	84.2	89.3	84.4	84.3	828
12.	dropout_000	89.0	84.8	83.0	88.9	86.0	83.6	88.9	86.0	84.0	828
13.	dropout_025	89.4	84.2	83.9	89.2	85.0	84.0	89.3	85.4	84.4	828
14.	dropout_050	84.6	83.5	82.2	84.4	84.5	82.6	84.6	84.9	82.9	828
15.	dropout_075	89.5	84.2	83.0	89.3	85.7	83.3	89.3	85.9	83.7	828
16.	dropout_090	84.5	83.8	82.4	84.3	84.8	82.7	84.5	85.1	82.9	828
17.	patience_4	85.3	83.4	82.6	85.2	84.9	82.7	85.3	85.1	83.1	828
18.	patience_7	86.3	83.1	82.8	86.2	84.9	83.0	86.3	85.1	83.4	828
19.	patience_10	87.1	84.4	83.3	87.1	85.1	83.8	87.2	85.3	84.2	828
20.	rate_10e-4	82.9	82.7	80.8	82.8	84.0	81.6	82.9	84.3	81.9	828
21.	rate_10e-3	85.2	83.9	82.1	85.1	85.0	82.7	85.3	85.2	83.0	828
22.	rate_10e-2	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	828

Table B.7: Architecture Tuning: Diffusion Fractional Anisotropy

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	92.6	94.3	94.2	93.1	94.6	94.2	93.9	94.9	95.6	92
2.	single_vox-single_targets	93.9	93.6	93.7	93.6	94.4	94.5	94.3	94.6	95.7	1576
3.	single_vox-single_roi	93.7	94.9	92.8	93.6	94.6	94.6	94.3	94.8	95.8	304
4.	single_vox-single_brain	93.4	94.9	94.9	93.6	94.9	94.8	94.3	95.1	96.0	198
5.	single_vox-many_brain	93.2	94.6	94.5	93.4	94.5	94.6	94.1	94.8	95.8	474
6.	many_vox-single_brain	94.7	95.8	94.8	94.7	95.5	95.1	95.4	95.7	96.3	934
7.	many_vox-CLR	94.0	95.3	94.9	94.2	95.2	94.9	94.9	95.4	96.1	828
8.	many_vox-CL	93.8	94.4	94.6	94.2	94.6	94.7	95.7	95.7	96.6	828
9.	many_vox-CR	95.0	96.4	94.7	95.2	96.1	94.9	95.0	95.6	95.0	828
10.	many_vox-HLR	92.4	94.1	93.8	92.4	94.2	93.8	93.3	94.6	94.9	828
11.	many_vox-HL	91.7	94.2	95.8	91.9	94.7	95.5	94.1	96.1	97.3	828
12.	many_vox-HR	91.8	93.7	92.2	91.6	95.1	93.4	91.2	94.3	93.6	828
13.	many_vox-HLR-clinical_CAP	93.3	89.4	95.2	93.2	90.9	95.1	93.9	92.3	95.3	829
14.	many_vox-HLR-clinical_UHDRS	93.6	89.8	94.7	93.4	90.8	94.9	94.1	92.3	95.1	832
15.	many_vox-HLR-clinical_all	93.2	88.6	94.3	92.5	90.4	94.6	93.3	92.0	94.9	919
16.	many_vox-CHLR	93.6	95.1	94.8	93.7	95.4	95.0	94.4	95.7	96.1	828
17.	many_vox-CHL	93.6	94.3	94.4	94.0	95.3	95.4	95.6	96.4	97.0	828
18.	many_vox-CHR	93.7	95.5	93.4	93.9	95.9	94.5	93.5	95.3	94.8	828
19.	many_vox-CLR_coords	94.5	95.7	95.0	94.6	95.5	95.1	95.3	95.7	96.2	831
20.	many_vox-CLR_scale	94.1	95.3	94.9	94.2	95.2	95.0	94.9	95.4	96.1	828
21.	many_vox-CLR_b50	93.8	95.1	94.2	93.9	94.8	94.5	94.8	95.1	95.8	828
22.	many_vox-CLR-balance_025	95.5	95.9	95.8	94.3	95.3	95.0	95.0	95.5	96.1	828
23.	many_vox-CLR-balance_050	95.3	95.8	95.8	94.3	95.2	95.1	95.0	95.4	96.3	828
24.	many_vox-CLR-balance_075	95.2	95.3	95.8	94.0	95.0	94.9	94.8	95.2	96.1	828
25.	many_vox-CLR-balance_100	95.4	95.7	95.8	94.3	95.2	95.0	95.0	95.4	96.2	828
27.	many_vox-CLR-reinclud	94.2	95.2	94.9	94.3	95.0	94.9	95.1	95.3	96.2	828
28.	many_vox-bal25-coords-brain	97.4	96.7	96.7	93.2	94.0	93.6	94.1	94.4	95.1	937
29.	many_vox-single_brain-coords	94.0	95.3	94.9	94.2	95.1	95.0	94.9	95.4	96.2	937

Table B.8: Hyperparameter Tuning: Mean Diffusivity - Native T1

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	93.0	93.8	94.1	93.6	94.7	94.3	94.3	95.0	95.6	92
2.	single_vox-single_targets	94.4	93.9	91.7	93.9	94.7	93.8	94.4	94.9	95.0	1576
3.	single_vox-single_roi	94.2	95.2	94.3	93.8	94.8	94.6	94.5	95.1	95.7	304
4.	single_vox-single_brain	93.9	95.5	92.2	93.8	94.9	94.0	94.4	95.1	95.2	198
5.	single_vox-many_brain	94.0	95.4	91.7	93.7	94.8	93.8	94.3	95.0	95.1	474
6.	many_vox-single_brain	94.1	95.2	93.8	94.1	95.0	94.5	94.7	95.3	95.7	934
7.	many_vox-CLR	94.9	95.1	94.4	95.1	95.8	94.8	95.6	96.1	95.6	828
8.	many_vox-CL	94.1	93.2	95.5	94.6	95.3	95.4	95.9	96.4	96.9	828
9.	many_vox-CR	95.0	96.3	91.4	95.3	96.6	92.8	94.9	96.1	92.0	828
10.	many_vox-HLR	92.2	94.6	95.5	92.6	94.7	95.3	93.3	94.9	96.4	828
11.	many_vox-HL	92.9	94.0	96.1	93.5	94.5	95.9	95.3	96.0	97.6	828
12.	many_vox-HR	92.7	94.9	94.6	93.3	95.1	95.5	92.8	94.2	95.4	828
13.	many_vox-HLR-clinical_CAP	92.7	90.5	93.3	92.9	91.9	94.2	93.6	93.0	94.3	829
14.	many_vox-HLR-clinical_UHDRS	93.0	90.6	93.5	92.8	91.8	94.1	93.5	93.0	94.2	832
15.	many_vox-HLR-clinical_all	92.8	88.9	93.9	92.2	90.9	94.3	93.1	92.1	94.5	919
16.	many_vox-CHLR	93.3	94.7	94.9	93.7	95.3	95.0	94.4	95.6	96.1	828
17.	many_vox-CHL	93.0	92.8	95.6	93.7	95.0	95.6	95.3	96.3	97.1	828
18.	many_vox-CHR	93.9	96.2	94.5	94.5	96.4	94.9	94.1	95.8	94.7	828
19.	many_vox-CLR_coords	94.8	95.2	94.3	95.0	95.9	94.6	95.5	96.2	95.6	831
20.	many_vox-CLR_scale	94.4	94.9	94.3	94.7	95.8	94.5	95.3	96.1	95.4	828
21.	many_vox-CLR_b50	94.7	95.1	94.5	94.9	95.8	94.6	95.4	96.1	95.6	828
22.	many_vox-CLR-balance_025	96.4	95.4	95.7	94.7	95.8	94.6	95.2	96.1	95.6	828
23.	many_vox-CLR-balance_050	96.6	95.5	95.1	94.9	95.8	94.7	95.5	96.1	95.6	828
24.	many_vox-CLR-balance_075	96.3	95.2	95.4	94.6	95.7	94.6	95.2	96.0	95.6	828
25.	many_vox-CLR-balance_100	96.3	95.3	95.2	94.7	95.7	94.9	95.3	96.0	95.9	828

Table B.9: Hyperparameter Tuning: Mean Diffusivity - Native T1/T2

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	87.6	88.6	88.7	88.7	91.7	91.5	87.8	90.8	90.0	92
2.	single_vox-single_targets	90.1	89.7	91.2	90.1	92.3	92.9	89.3	91.5	91.5	1380
3.	single_vox-single_roi	90.5	91.3	88.7	90.6	92.6	93.0	89.7	91.7	91.5	276
4.	single_vox-single_brain	89.8	90.2	89.9	90.3	92.5	93.1	89.5	91.6	91.7	184
5.	single_vox-many_roi	90.4	90.8	89.4	90.4	92.5	92.9	89.5	91.7	91.4	828
6.	many_vox-single_roi	94.3	93.7	92.0	94.2	95.0	94.8	93.8	94.8	93.9	1012
7.	many_vox-CLR	93.9	93.6	92.5	94.1	95.0	95.1	93.8	94.7	94.3	828
8.	many_vox-CL	94.3	92.3	93.1	95.4	95.2	96.2	94.4	94.1	95.2	828
9.	many_vox-CR	92.2	94.1	91.4	90.4	93.9	91.6	92.2	94.8	92.5	828
10.	many_vox-HLR	92.0	89.2	86.9	92.9	90.9	90.8	91.6	89.7	88.1	828
11.	many_vox-HL	92.1	90.0	88.2	93.8	91.7	92.3	91.9	89.7	89.0	828
12.	many_vox-HR	87.7	85.3	81.0	85.4	84.8	84.4	87.0	86.3	85.9	828
13.	many_vox-HLR-clinical_CAP	90.0	90.2	78.1	91.1	92.0	85.1	89.5	90.8	82.3	829
14.	many_vox-HLR-clinical_UHDRS	82.9	87.5	77.7	86.1	88.2	85.7	83.6	86.7	83.1	832
15.	many_vox-HLR-clinical_all	84.8	83.3	80.7	86.5	88.0	86.3	84.1	86.5	83.8	919
16.	many_vox-CHLR	91.8	91.9	90.3	92.7	92.6	93.2	91.7	91.9	91.6	828
17.	many_vox-CHL	93.1	92.2	91.6	94.7	93.9	94.8	93.3	92.5	92.9	828
18.	many_vox-CHR	91.1	92.1	89.5	89.4	90.8	89.6	91.0	91.9	90.4	828
19.	many_vox-CLR_coords	94.0	93.8	93.2	94.2	95.1	95.3	93.9	94.9	94.5	831
20.	many_vox-CLR_scale	93.7	93.5	92.4	94.0	94.9	94.9	93.6	94.6	94.0	828
22.	many_vox-CLR-balance_025	95.2	95.0	94.6	94.1	95.0	95.1	93.7	94.7	94.3	828
23.	many_vox-CLR-balance_050	95.0	94.5	94.2	94.1	95.0	95.2	93.7	94.7	94.4	828
24.	many_vox-CLR-balance_075	95.0	94.3	94.6	94.2	95.0	95.2	93.8	94.7	94.4	828
25.	many_vox-CLR-balance_100	95.4	94.3	94.5	94.3	95.0	95.1	93.9	94.7	94.3	828
27.	many_vox-CLR-reinclud	93.5	93.3	93.6	93.9	94.8	95.2	93.4	94.6	94.5	828
28.	many_vox-single_roi-coords	94.8	93.8	92.6	94.6	95.2	95.1	94.2	94.9	94.3	1015

Table B.10: Hyperparameter Tuning: Mean Diffusivity - Normalized T1

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	86.5	89.4	90.2	88.9	90.8	92.6	88.2	90.7	91.7	92
2.	single_vox-single_targets	90.5	91.1	91.9	90.1	91.8	93.3	89.5	91.7	92.3	1380
3.	single_vox-single_roi	90.5	91.3	90.5	90.4	91.8	93.5	89.8	91.7	92.5	276
4.	single_vox-single_brain	91.1	91.3	92.0	90.9	92.0	93.6	90.3	92.0	92.6	184
5.	single_vox-many_brain	90.7	91.4	92.6	90.5	91.9	93.7	89.9	91.8	92.7	460
6.	many_vox-single_brain	93.5	93.6	94.1	93.7	94.7	94.8	93.3	94.7	94.1	920
7.	many_vox-CLR	92.4	91.2	93.5	93.0	93.8	94.4	92.6	93.9	93.8	828
8.	many_vox-CL	90.1	90.2	92.1	92.4	93.2	94.4	91.0	92.2	93.3	828
9.	many_vox-CR	91.3	91.9	92.5	90.0	93.2	90.6	91.9	94.4	92.1	828
10.	many_vox-HLR	90.0	84.2	89.0	91.4	86.1	91.4	90.1	84.6	89.7	828
11.	many_vox-HL	90.2	84.0	90.5	92.8	88.1	93.2	91.2	85.3	90.9	828
12.	many_vox-HR	86.3	81.8	86.3	85.0	79.6	86.7	86.5	81.8	88.3	828
13.	many_vox-HLR-clinical_CAP	87.1	91.1	84.9	89.7	91.6	88.3	88.0	90.7	86.6	829
14.	many_vox-HLR-clinical_UHDRS	83.0	88.7	76.7	87.3	89.6	85.1	85.3	88.5	82.6	832
15.	many_vox-HLR-clinical_all	88.2	89.2	81.3	89.1	91.5	87.6	87.5	90.6	86.0	919
16.	many_vox-CHLR	91.7	88.8	90.7	92.8	90.6	93.1	92.0	89.7	92.0	828
17.	many_vox-CHL	91.7	88.7	91.6	93.7	91.6	94.5	92.4	89.8	92.8	828
18.	many_vox-CHR	90.6	88.7	89.7	89.1	87.2	89.0	90.7	88.6	90.4	828
19.	many_vox-CLR_coords	93.3	91.1	93.9	93.7	94.2	94.7	93.4	94.2	94.1	831
20.	many_vox-CLR_scale	92.5	91.3	93.4	93.1	93.9	94.4	92.7	94.0	93.8	828
22.	many_vox-CLR-balance_025	93.6	91.7	95.2	93.3	93.9	94.6	92.9	94.0	94.0	828
23.	many_vox-CLR-balance_050	93.4	91.3	94.9	93.3	94.0	94.5	92.9	94.0	93.9	828
24.	many_vox-CLR-balance_075	93.2	90.7	94.9	93.3	93.9	94.5	93.0	94.0	93.9	828
25.	many_vox-CLR-balance_100	93.2	90.4	94.8	93.4	94.0	94.5	93.0	94.0	93.9	828
28.	many_vox-bal100-coords-brain	96.9	95.8	93.0	92.3	93.8	93.3	91.4	93.3	92.2	923
29.	many_vox-single_brain-coords	93.7	93.7	94.2	93.8	94.8	94.9	93.5	94.8	94.3	923

Table B.11: Hyperparameter Tuning: Mean Diffusivity - Normalized T1/T2

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
6.	native-t1-many_vox-single_brain	94.7	95.8	94.8	94.7	95.5	95.1	95.4	95.7	96.3	934
1.	layers_2048	94.6	95.8	95.1	94.6	95.5	95.2	95.3	95.7	96.4	934
2.	layers_1024	94.2	95.5	95.0	94.3	95.2	95.0	95.0	95.4	96.2	934
3.	layers_512	94.3	95.4	94.9	94.4	95.2	95.0	95.1	95.4	96.2	934
4.	activation_sigmoid	94.2	95.4	95.0	94.3	95.2	95.0	95.0	95.4	96.2	934
5.	activation_relu	94.6	95.5	94.9	94.6	95.2	95.0	95.3	95.4	96.2	934
6.	activation_silu	95.3	95.8	94.5	95.1	95.4	94.9	95.7	95.5	96.0	934
8.	batch_10e5	93.0	94.6	94.3	93.3	94.3	94.3	94.1	94.6	95.8	934
9.	batch_10e4	94.0	95.4	94.9	94.1	95.1	94.9	94.8	95.3	96.1	934
10.	batch_10e3	95.1	95.9	94.7	95.0	95.5	95.1	95.6	95.7	96.2	934
11.	batch_10e2	95.7	95.8	94.5	95.5	95.3	94.9	96.0	95.4	95.8	934
12.	dropout_000	94.9	95.8	94.8	94.9	95.5	95.1	95.5	95.6	96.2	934
13.	dropout_025	95.6	95.9	94.5	95.5	95.4	94.9	96.0	95.5	96.0	934
14.	dropout_050	94.9	95.9	94.7	94.9	95.6	95.0	95.5	95.7	96.2	934
15.	dropout_075	94.5	95.7	95.0	94.5	95.4	95.2	95.2	95.6	96.3	934
16.	dropout_090	94.7	95.8	94.7	94.7	95.4	95.0	95.4	95.6	96.2	934
17.	patience_4	94.2	95.5	95.0	94.3	95.2	95.0	95.0	95.4	96.2	934
18.	patience_7	95.2	95.9	94.7	95.1	95.5	95.1	95.7	95.6	96.1	934
19.	patience_10	94.6	95.9	94.9	94.6	95.5	95.1	95.3	95.7	96.2	934
20.	rate_10e-4	94.4	95.6	94.9	94.5	95.3	95.2	95.2	95.5	96.3	934
21.	rate_10e-3	94.9	95.9	94.8	94.8	95.5	95.2	95.5	95.6	96.3	934
22.	rate_10e-2	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	<i>nan</i>	934

Table B.12: Architecture Tuning: Mean Diffusivity

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	63.7	66.6	66.4	63.8	66.3	66.8	63.9	66.3	67.0	92
2.	single_vox-single_targets	65.4	65.6	62.1	65.5	65.3	62.8	65.3	65.0	63.2	1576
3.	single_vox-single_roi	64.9	65.9	61.2	65.0	65.5	61.9	64.7	65.2	62.3	304
4.	single_vox-single_brain	64.2	66.1	65.6	64.4	65.8	66.0	64.0	65.6	66.3	198
5.	single_vox-many_brain	64.2	66.0	65.9	64.3	65.6	66.3	64.2	65.5	66.7	474
6.	many_vox-single_targets	72.6	70.1	67.2	72.7	70.1	67.8	72.2	69.1	68.0	2312
7.	many_vox-single_roi	71.1	71.6	67.6	71.1	71.3	68.0	70.5	70.8	67.7	1040
8.	many_vox-single_brain	72.0	72.2	70.9	72.1	72.0	71.0	71.6	71.2	71.0	934
9.	many_vox-CLR	72.1	72.2	71.4	72.2	71.9	71.5	71.8	71.3	71.5	828
10.	many_vox-CL	71.6	69.3	71.3	71.7	68.7	71.4	71.4	68.1	72.2	828
11.	many_vox-CR	73.9	73.9	69.1	73.9	73.9	69.1	73.6	73.3	68.2	828
12.	many_vox-HLR	70.0	67.6	66.1	69.9	67.9	66.9	69.8	67.1	66.7	828
13.	many_vox-HL	65.8	63.9	66.3	65.6	63.8	67.3	65.2	63.1	68.2	828
14.	many_vox-HR	70.4	67.6	68.3	70.3	68.0	68.5	70.1	66.7	67.2	828
15.	many_vox-HLR-clinical_CAP	70.3	68.8	64.6	70.3	69.0	64.6	70.0	69.6	64.4	829
16.	many_vox-HLR-clinical_UHDRS	69.7	68.1	67.1	69.7	68.5	67.1	69.3	68.8	67.2	832
17.	many_vox-HLR-clinical_all	69.6	65.5	60.4	69.7	66.0	60.4	69.3	66.3	60.2	919
18.	many_vox-CHLR	71.6	70.7	70.4	71.5	70.5	70.2	71.2	70.1	70.2	828
19.	many_vox-CHL	70.9	69.0	70.5	70.8	68.8	70.8	70.6	69.1	71.9	828
20.	many_vox-CHR	70.6	71.7	69.4	70.4	71.7	69.6	70.3	71.1	69.0	828
21.	many_vox-CLR_coords	72.7	72.5	70.8	72.7	72.3	70.8	72.4	71.8	71.0	831
22.	many_vox-CLR_scale	72.0	71.7	69.8	72.0	71.4	69.7	71.5	70.4	69.5	828
23.	many_vox-CLR_b50	70.6	71.0	71.2	70.6	70.8	71.2	70.4	70.6	71.7	828
24.	many_vox-feature_10	71.7	71.7	70.8	71.8	71.5	70.8	71.4	70.9	70.7	738
25.	many_vox-feature_20	71.7	72.1	71.2	71.8	71.9	71.1	71.4	71.1	71.1	648
26.	many_vox-feature_30	71.6	72.1	70.4	71.7	71.9	70.4	71.5	71.4	70.1	558
27.	many_vox-feature_40	71.9	71.9	69.9	72.0	71.7	69.9	71.7	71.2	69.9	468
28.	many_vox-balance_025	63.1	60.8	61.4	65.2	65.6	61.0	65.0	64.9	62.1	828
29.	many_vox-balance_050	67.0	61.5	61.5	60.3	59.8	53.6	60.2	58.8	54.5	828
30.	many_vox-balance_075	69.3	61.7	62.6	59.7	59.4	51.3	59.8	58.2	52.4	828
31.	many_vox-balance_100	64.9	61.3	62.0	52.3	53.7	46.8	52.4	53.2	48.0	828
32.	many_vox-reinclude	72.6	71.9	70.6	72.6	71.6	70.6	72.2	71.0	70.6	828
33.	many_vox-CLR-aug	72.8	72.6	70.3	72.9	72.3	70.3	72.5	71.7	70.6	828

Table B.13: Hyperparameter Tuning: Relative Connectivity - Native T1

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	62.7	65.8	66.1	62.8	65.4	66.4	62.7	65.3	66.4	92
2.	single_vox-single_targets	65.0	66.1	61.4	65.2	65.8	61.7	64.9	65.3	61.8	1576
3.	single_vox-single_roi	65.8	66.8	60.3	65.9	66.5	60.4	65.6	66.1	60.2	304
4.	single_vox-single_brain	63.9	66.0	65.6	64.0	65.7	65.7	63.8	65.5	65.5	198
5.	single_vox-many_brain	64.0	65.4	62.7	64.1	65.2	62.7	63.8	64.9	62.3	474
6.	many_vox-single_targets	72.3	71.4	69.7	72.4	71.2	69.9	72.1	70.6	69.8	2312
7.	many_vox-single_roi	73.2	71.6	70.0	73.2	71.5	70.2	72.9	71.0	70.1	1040
8.	many_vox-single_brain	72.2	71.8	71.4	72.3	71.7	71.3	71.9	71.1	71.1	934
9.	many_vox-CLR	70.8	71.8	69.8	70.9	71.5	70.0	70.6	71.4	69.7	828
10.	many_vox-CL	70.4	70.1	68.0	70.5	69.7	68.2	70.1	70.4	68.5	828
11.	many_vox-CR	70.7	72.4	68.6	70.8	72.3	68.7	70.5	71.9	68.5	828
12.	many_vox-HLR	69.0	61.7	68.4	69.0	62.4	68.7	68.7	62.1	68.7	828
13.	many_vox-HL	67.9	64.0	68.3	67.9	64.2	69.6	67.8	64.0	70.6	828
14.	many_vox-HR	68.6	63.0	69.8	68.7	64.0	69.8	68.2	63.5	70.1	828
15.	many_vox-HLR-clinical_CAP	70.3	68.7	65.6	70.3	68.8	65.6	70.0	69.2	65.1	829
16.	many_vox-HLR-clinical_UHDRS	70.6	67.7	66.0	70.6	68.0	66.0	70.3	68.5	65.6	832
17.	many_vox-HLR-clinical_all	69.5	65.0	59.7	69.6	65.3	59.8	69.1	65.6	59.8	919
18.	many_vox-CHLR	70.0	69.2	70.2	69.9	69.1	70.6	69.6	68.6	70.2	828
19.	many_vox-CHL	71.4	68.4	70.1	71.3	68.0	70.9	71.0	67.5	71.0	828
20.	many_vox-CHR	70.5	69.5	71.2	70.4	69.6	71.2	70.2	69.7	71.2	828
21.	many_vox-CLR_coords	73.3	72.6	70.7	73.4	72.5	70.9	73.2	72.7	70.5	831
22.	many_vox-CLR_scale	71.8	71.2	69.6	71.9	71.0	69.8	71.6	71.2	69.2	828
23.	many_vox-CLR_b50	72.3	71.7	70.5	72.4	71.4	70.6	72.1	71.2	70.2	828
24.	many_vox-feature_10	72.2	71.7	69.4	72.3	71.5	69.6	72.0	71.2	69.0	738
25.	many_vox-feature_20	70.9	71.2	68.7	71.0	71.0	69.0	70.7	71.0	68.5	648
26.	many_vox-feature_30	70.9	71.3	69.1	71.0	71.1	69.5	70.7	71.1	69.2	558
27.	many_vox-feature_40	70.3	70.8	68.6	70.4	70.6	68.9	70.1	70.4	68.5	468
28.	many_vox-balance_025	61.4	58.6	57.7	63.3	62.5	58.8	63.2	62.2	58.4	828
29.	many_vox-balance_050	60.2	56.3	56.4	57.4	56.4	52.3	57.3	55.4	52.2	828
30.	many_vox-balance_075	61.8	56.5	58.5	52.7	51.0	48.3	52.8	50.5	48.3	828
31.	many_vox-balance_100	62.2	57.1	58.1	51.0	49.3	46.0	50.9	48.7	46.4	828

Table B.14: Hyperparameter Tuning: Relative Connectivity - Native T1/T2

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	63.1	65.1	66.5	63.6	66.0	66.7	63.2	65.5	66.2	92
2.	single_vox-single_targets	63.3	64.2	66.5	63.8	65.3	66.9	63.4	64.7	66.3	1380
3.	single_vox-single_roi	63.5	64.4	59.7	64.0	65.6	59.7	63.7	64.9	59.5	276
4.	single_vox-single_brain	63.5	65.1	66.7	64.0	66.1	67.3	63.7	65.5	66.4	184
5.	single_vox-many_brain	63.2	64.9	66.7	63.7	65.9	67.4	63.4	65.3	66.5	460
6.	many_vox-single_targets	73.9	69.5	69.8	73.5	69.6	69.8	74.1	69.8	69.6	2116
7.	many_vox-single_roi	72.7	69.1	62.2	72.2	69.5	61.9	72.9	69.5	61.9	1012
8.	many_vox-single_brain	70.1	70.5	67.4	69.4	71.1	66.9	70.2	70.8	67.1	920
9.	many_vox-CLR	71.9	71.4	73.0	71.4	71.9	73.1	72.0	71.8	72.9	828
10.	many_vox-CL	70.0	66.1	70.6	69.8	67.7	71.7	70.2	66.2	70.6	828
11.	many_vox-CR	73.1	73.5	71.3	73.1	73.3	70.9	73.1	73.7	71.3	828
12.	many_vox-HLR	68.0	67.4	63.9	68.5	69.3	66.1	67.9	67.8	65.0	828
13.	many_vox-HL	68.8	67.0	63.2	69.6	68.9	67.2	68.9	67.6	65.0	828
14.	many_vox-HR	69.2	68.2	64.3	69.9	70.5	66.3	69.1	68.7	65.0	828
15.	many_vox-HLR-clinical_CAP	69.1	67.9	63.9	69.9	68.1	65.6	69.2	68.0	63.1	829
16.	many_vox-HLR-clinical_UHDRS	68.2	66.9	64.6	68.9	67.0	66.5	68.3	66.9	64.0	832
17.	many_vox-HLR-clinical_all	64.9	62.8	60.7	65.7	62.9	63.2	65.1	63.0	60.7	919
18.	many_vox-CHLR	70.5	70.3	72.1	70.5	71.3	72.7	70.4	70.4	72.0	828
19.	many_vox-CHL	70.8	68.5	70.7	71.1	70.2	72.2	70.8	68.8	70.7	828
20.	many_vox-CHR	71.3	70.8	70.9	71.5	71.8	70.8	71.2	70.9	70.9	828
21.	many_vox-CLR_coords	73.0	71.5	73.0	72.6	72.1	73.3	73.2	71.9	73.0	831
22.	many_vox-CLR_scale	71.2	71.0	72.1	71.0	71.4	72.1	71.3	71.2	72.0	828
23.	many_vox-feature_10	70.3	70.8	71.5	70.1	71.6	71.5	70.4	71.1	71.4	738
24.	many_vox-feature_20	71.5	70.5	71.6	71.3	71.3	71.9	71.6	70.8	71.5	648
25.	many_vox-feature_30	69.4	69.8	70.1	69.1	70.2	70.0	69.6	70.1	70.1	558
26.	many_vox-feature_40	69.9	69.9	70.4	69.8	70.6	70.4	70.1	70.2	70.3	468
28.	many_vox-balance_025	63.1	58.3	63.3	64.6	64.0	64.1	65.1	63.5	63.4	828
29.	many_vox-balance_050	66.5	57.1	63.5	60.6	59.4	56.4	60.8	58.5	55.8	828
30.	many_vox-balance_075	66.8	57.1	64.7	55.8	55.1	52.3	56.1	54.2	51.7	828
31.	many_vox-balance_100	67.6	56.9	64.7	54.7	54.5	50.7	54.9	53.1	50.2	828
32.	many_vox-reinclude	71.5	71.0	71.2	71.3	71.8	71.5	71.7	71.4	71.1	828

Table B.15: Hyperparameter Tuning: Relative Connectivity - Normalized T1

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
1.	single_vox	62.4	64.2	66.5	62.8	65.2	66.6	62.6	64.7	66.2	92
2.	single_vox-single_targets	62.4	64.2	66.5	62.8	65.2	66.6	62.6	64.7	66.2	1380
3.	single_vox-single_roi	63.1	63.9	66.3	63.5	65.0	66.6	63.3	64.3	66.1	276
4.	single_vox-single_brain	63.4	63.0	64.0	63.9	63.7	63.8	63.5	63.2	63.9	184
5.	single_vox-many_brain	63.2	62.4	63.5	63.8	63.2	63.4	63.4	62.4	63.4	460
6.	many_vox-single_targets	71.0	68.5	66.1	70.7	68.9	65.3	71.1	68.6	65.9	2116
7.	many_vox-single_roi	70.5	68.9	69.6	70.4	69.4	69.3	70.6	69.0	69.6	1012
8.	many_vox-single_brain	71.8	69.6	68.0	71.6	69.7	67.3	71.9	69.6	68.0	920
9.	many_vox-CLR	71.6	70.3	71.1	71.7	71.5	70.4	71.7	70.5	70.9	828
10.	many_vox-CL	70.6	68.0	69.9	70.7	70.3	70.0	70.7	68.1	69.9	828
11.	many_vox-CR	72.0	72.1	71.3	72.2	72.0	70.6	72.1	72.3	71.2	828
12.	many_vox-HLR	68.4	63.6	70.0	68.9	65.5	71.8	68.3	63.7	70.3	828
13.	many_vox-HL	66.8	61.9	67.8	67.3	64.4	70.1	66.8	62.1	67.9	828
14.	many_vox-HR	68.9	62.6	69.4	69.7	65.0	71.1	68.8	63.2	69.6	828
15.	many_vox-HLR-clinical_CAP	66.4	66.5	59.3	67.2	66.2	61.7	66.5	66.0	59.1	829
16.	many_vox-HLR-clinical_UHDS	68.5	66.8	62.1	69.3	66.9	65.0	68.5	66.6	62.2	832
17.	many_vox-HLR-clinical_all	65.4	64.6	62.1	66.2	64.8	64.7	65.4	64.5	62.1	919
18.	many_vox-CHLR	70.0	66.9	71.1	70.2	68.1	71.2	70.0	67.0	71.0	828
19.	many_vox-CHL	69.4	66.1	70.7	69.7	68.0	71.3	69.4	66.1	70.6	828
20.	many_vox-CHR	69.4	67.3	70.2	69.9	68.2	70.2	69.3	67.3	70.2	828
21.	many_vox-CLR_coords	73.8	71.1	71.8	73.6	71.9	70.8	74.0	71.3	71.7	831
22.	many_vox-CLR_scale	71.5	69.5	71.9	71.5	70.6	71.3	71.7	69.7	71.8	828
23.	many_vox-feature_10	70.2	69.8	71.5	70.4	71.2	71.1	70.3	70.0	71.4	738
24.	many_vox-feature_20	71.4	70.3	71.0	71.3	71.3	70.2	71.5	70.7	70.8	648
25.	many_vox-feature_30	72.3	69.9	70.4	72.3	71.1	69.6	72.4	70.2	70.1	558
26.	many_vox-feature_40	70.1	69.8	71.5	70.3	71.0	70.8	70.3	70.0	71.3	468
28.	many_vox-balance_025	67.6	55.9	62.5	67.3	61.7	60.4	67.4	61.0	60.4	828
29.	many_vox-balance_050	63.0	54.4	60.9	58.0	54.9	52.8	58.3	53.8	52.7	828
30.	many_vox-balance_075	61.5	54.9	61.5	50.2	47.8	45.0	50.6	46.9	45.4	828
31.	many_vox-balance_100	64.2	54.9	64.0	49.4	46.4	43.8	49.7	45.2	44.2	828

Table B.16: Hyperparameter Tuning: Relative Connectivity - Normalized T1/T2

ID	Experiment	Raw			Native			Normalized			Input Layer
		Train	Val	Test	Train	Val	Test	Train	Val	Test	
21.	normalized-t1-many_vox-CLR_coords	73.0	71.5	73.0	72.6	72.1	73.3	73.2	71.9	73.0	831
1.	layers_2048	72.7	71.6	72.8	72.4	72.4	73.0	72.9	71.9	72.6	831
2.	layers_1024	71.7	71.7	73.4	71.5	72.6	73.4	71.8	72.0	73.2	831
3.	layers_512	71.9	71.7	72.2	71.6	72.7	72.3	72.0	72.1	72.1	831
4.	activation_sigmoid	71.7	71.7	73.4	71.5	72.6	73.4	71.8	72.0	73.2	831
5.	activation_relu	73.4	71.8	72.1	73.2	72.8	72.3	73.5	72.1	72.0	831
6.	activation_silu	72.5	70.0	70.5	72.2	70.5	70.7	72.6	70.3	70.3	831
7.	activation_elu	71.4	70.9	72.9	71.1	71.6	72.7	71.5	71.3	72.8	831
8.	batch_10e5	69.4	71.1	70.6	69.1	71.4	70.4	69.5	71.4	70.5	831
9.	batch_10e4	71.7	71.7	73.4	71.5	72.6	73.4	71.8	72.0	73.2	831
10.	batch_10e3	73.0	71.7	72.7	72.7	72.5	72.6	73.1	72.1	72.6	831
11.	batch_10e2	70.7	70.5	70.8	70.4	70.8	71.0	70.9	70.7	70.7	831
12.	dropout_000	73.0	71.7	72.7	72.7	72.5	72.6	73.1	72.1	72.6	831
13.	dropout_025	73.5	71.1	73.1	73.2	71.7	73.3	73.6	71.5	73.0	831
14.	dropout_050	72.8	70.6	71.8	72.7	71.4	72.0	72.9	70.9	71.8	831
15.	dropout_075	73.2	71.1	72.7	73.0	72.0	72.6	73.4	71.4	72.6	831
16.	dropout_090	71.2	71.5	71.3	70.9	72.1	71.3	71.3	71.8	71.2	831
17.	patience_4	71.9	71.6	72.4	71.9	72.5	72.5	72.0	71.9	72.2	831
18.	patience_7	73.2	71.1	72.7	73.0	72.0	72.6	73.4	71.4	72.6	831
19.	patience_10	72.8	71.1	71.3	72.6	71.7	71.8	72.9	71.3	71.2	831
20.	rate_10e-4	73.4	71.9	73.4	73.3	72.9	73.4	73.5	72.3	73.4	831
21.	rate_10e-3	73.2	71.1	72.7	73.0	72.0	72.6	73.4	71.4	72.6	831
22.	rate_10e-2	62.4	64.2	66.5	62.8	65.2	66.6	62.6	64.7	66.2	831

Table B.17: Architecture Tuning: Relative Connectivity

Source Code

```
source
├── data
│   ├── models
│   ├── native
│   │   ├── preloaded
│   │   ├── preprocessed
│   │   └── raw
│   ├── normalized
│   │   ├── preloaded
│   │   ├── preprocessed
│   │   └── raw
│   ├── preprocessed
│   └── raw
├── logs
├── fsleyes
├── distributed
├── experiments
│   ├── subcortical
│   ├── diffusion_md
│   │   ├── native-t1
│   │   ├── native-t1t2
│   │   ├── normalized-t1
│   │   ├── normalized-t1t2
│   │   └── architecture
│   ├── diffusion_fa
│   │   ├── native-t1
│   │   ├── native-t1t2
│   │   ├── normalized-t1
│   │   ├── normalized-t1t2
│   │   └── architecture
│   ├── connection
│   │   ├── native-t1
│   │   ├── native-t1t2
│   │   ├── normalized-t1
│   │   ├── normalized-t1t2
│   │   └── architecture
│   ├── streamline
│   └── misc
├── report
│   ├── progress
│   └── project
```